
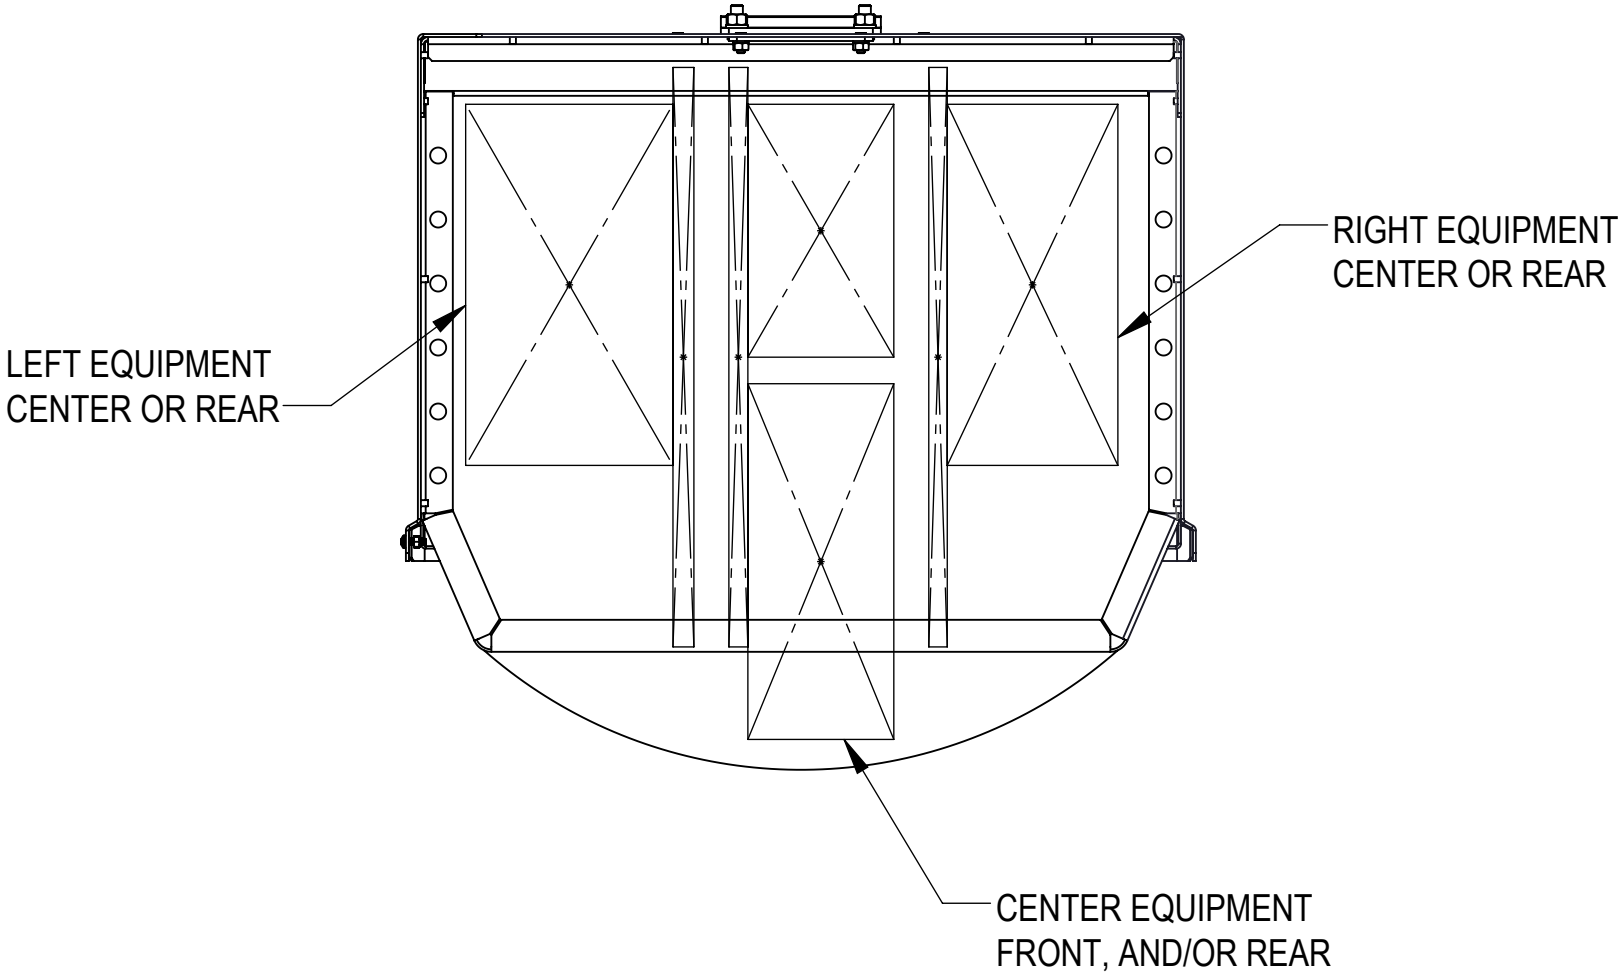


REVISIONS			
REV.	DESCRIPTION	DATE	APPROVED
A	INITIAL RELEASE	TN1010 12SEP21	JW1064 14832PC
B	VARIOUS DESIGN UPDATE	TN1010 07FEB22	JW1064 40139993CMO
C	SHEET 2: ADDED E17 IN CONFIGURE TABLE; SLIDE PANEL MOUNTING LOCATION 13 WAS 12 FOR E7, E8, E11, E12, E13; ADDED SHEET 22	MS1288 15DEC25	JX1002 50106310AMO

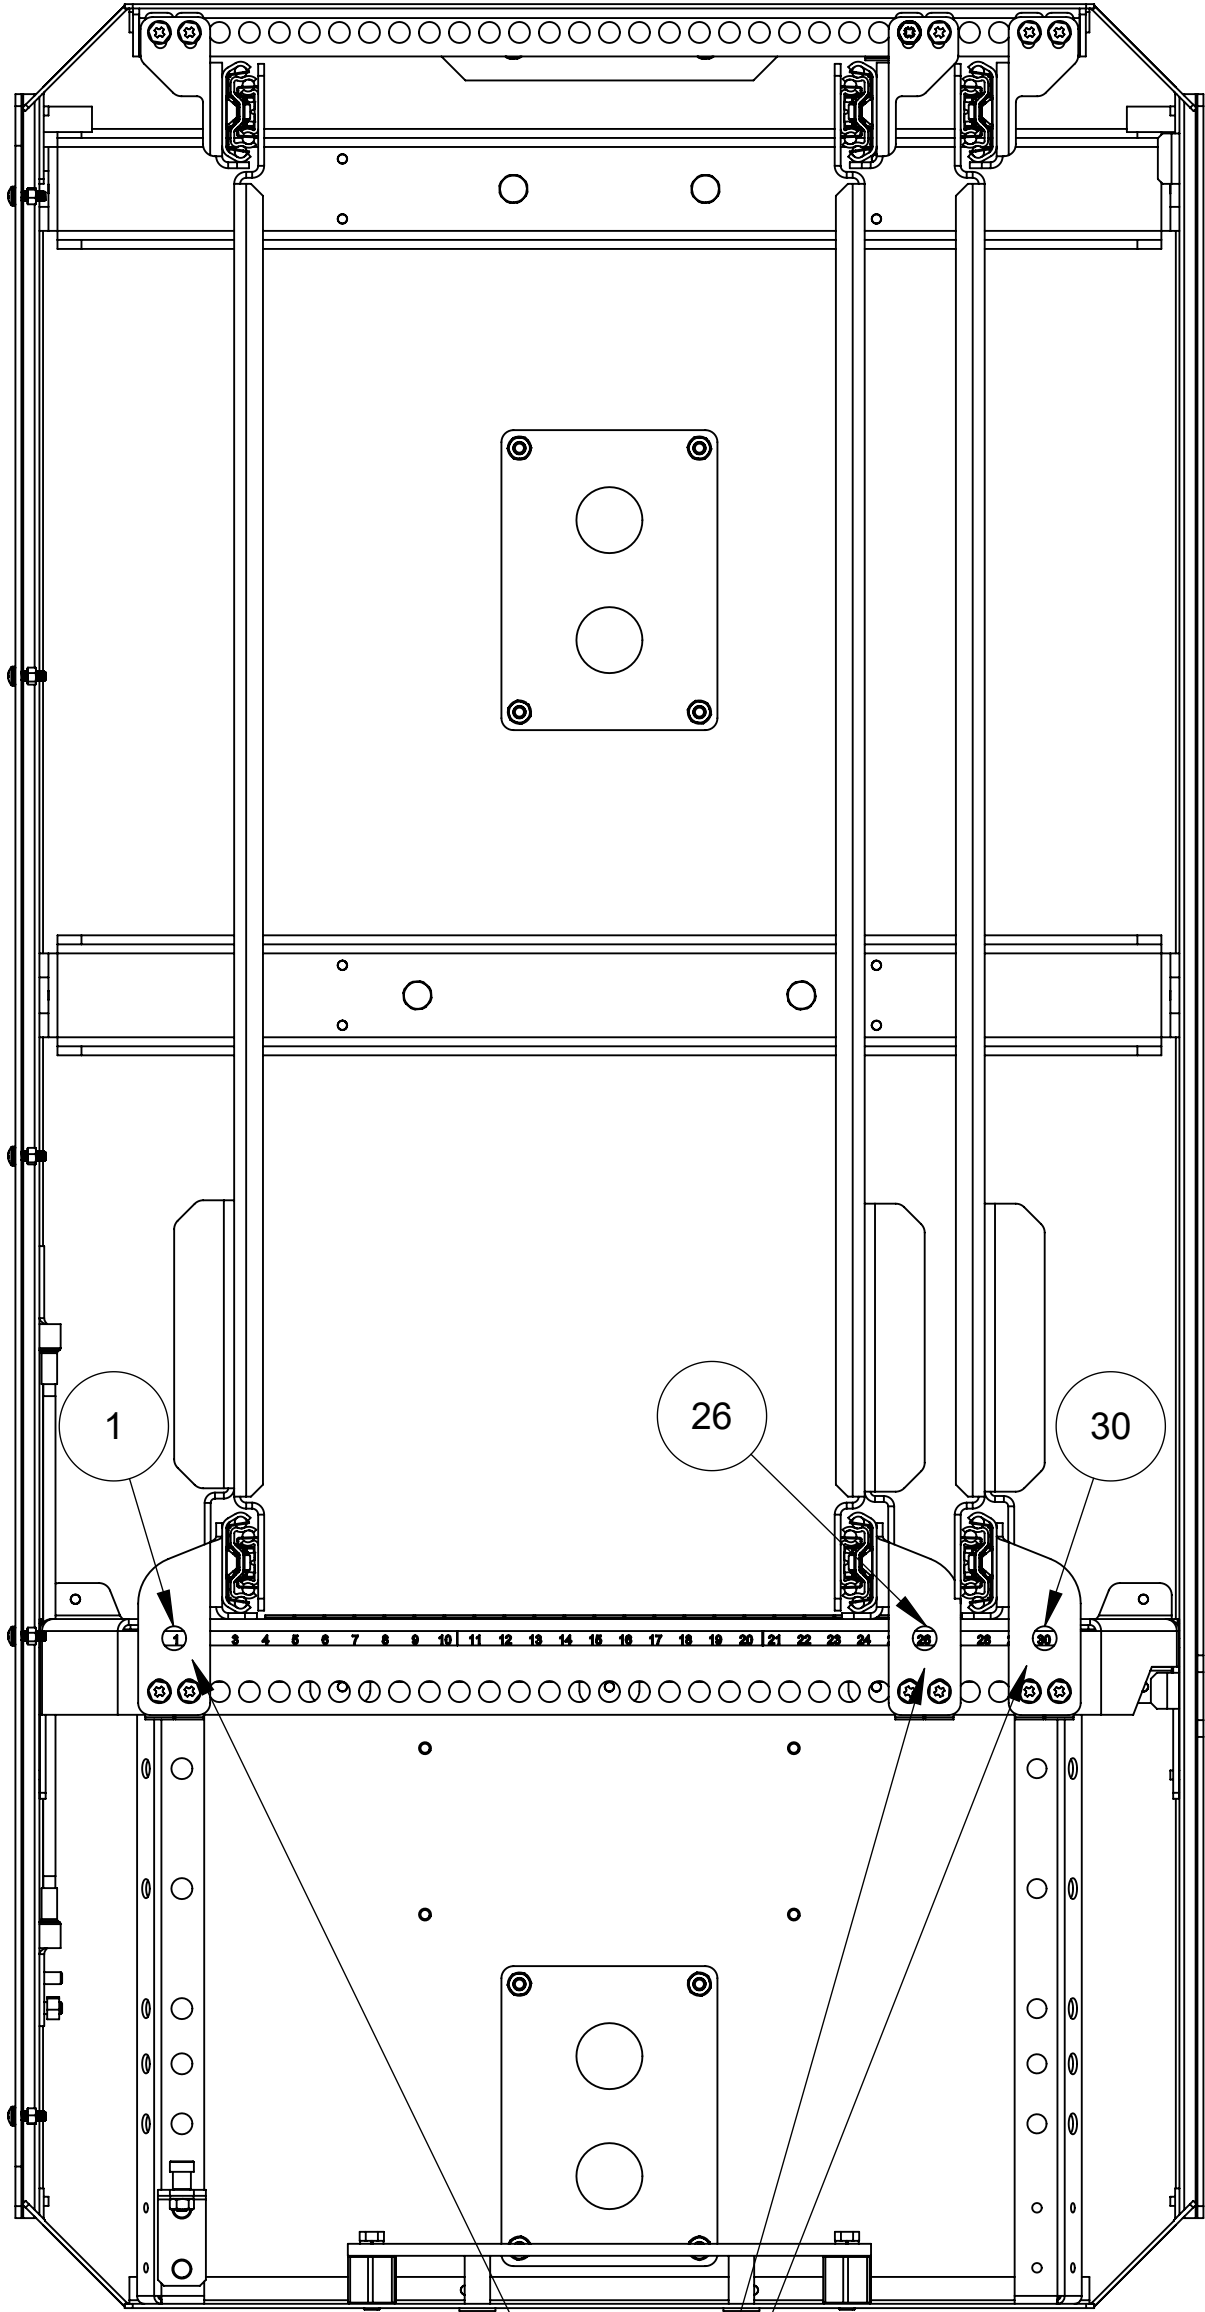

BASE ENCLOSURE ARE SHIPPED WITH 3 SLIDE PANELS
CONFIGURE SLIDE PANELS PER EQUIPMENT CONFIGURATION

EMPTY ENCLOSURE CONFIGURATION

**ANDREW**[®] an Amphenol company

TOLERANCES		SAP MATERIAL MASTER						
1 PLACE .X[X] ± NONE		3 PLACE .XXX[X] ±						
2 PLACE .XX[X] ±		ANGLES ±						
FINISH		MATERIAL						
UNLESS OTHERWISE SPECIFIED DIMENSIONS ARE IN INCHES INTERPRET PER ANSI Y 14.5M-1994		NAME	DATE	TITLE ASSY,INSTALL INSTRUCTIONS,ERC,MV2				
		CE JW1064	05/17/2021					
		RW MS1288	03/29/2026	SCALE 1:5		DOCUMENT NO. 760249586ERC_MV2		
		AD DM1121	03/29/2026					
		RE DM1121	03/29/2026					
ECN 50106310AMO								
SIZE	Auth Group	INSL	MODEL		DRAWING			SHEET 1 OF 22
C			VERSION 03	STATUS RE	REVISION C	VERSION 03	STATUS RE	

DENSITY	lbs/in ³
MASS	lbs
VOLUME	in ³
SURFACE AREA	in ²
HEIGHT	
LENGTH	
WIDTH	

Confidential

D	4		3		2		1		
	REGION	CONFIGURATION	SHEET NO.	EQUIP. 1	EQUIP. 2	EQUIP. 3	EQUIP. 4	EQUIP. 5	EQUIP. 6
		E1	6	ERC 4455	ERC 4478		PSU-ERC-AC08 (QTY 2)	SDX1926Q-43	RAYCAP DISCONNECT
		E2	7	ERC RRU-11/RRU32/2212 (QTY 2)			PSU-ERC-AC08 (QTY 2)	SDX1926Q-43	RAYCAP DISCONNECT
		E3	8	ERC 2203 (QTY 6)			PSU-ERC-AC08 (QTY 3)	SDX1926Q-43	RAYCAP DISCONNECT
		E4	9	ERC 4415	ERC 220X		PSU-ERC-AC08 (QTY 2)	SDX1926Q-43	RAYCAP DISCONNECT
		E5	10	ERC 4426	ERC 220X		PSU-ERC-AC08 (QTY 2)	SDX1926Q-43	RAYCAP DISCONNECT
		E6	11	ERC 8843			PSU-ERC-AC08 (QTY 2)	SDX1926Q-43	RAYCAP DISCONNECT
		E7	12	ERC 4449			PSU-ERC-AC08 (QTY 2)	SDX1926Q-43	RAYCAP DISCONNECT
		E8	13	ERC 4449	ERC 8863		PSU-ERC-AC08 (QTY 3)	SDX1926Q-43	RAYCAP DISCONNECT
	E9	14	ERC 8843	ERC 8863		PSU-ERC-AC08 (QTY 3)	SDX1926Q-43	RAYCAP DISCONNECT	
C		E10	15	ERC 8843	ERC 4478		PSU-ERC-AC08 (QTY 3)	SDX1926Q-43	RAYCAP DISCONNECT
		E11	16	ERC 4449	ERC 4415	ERC 220X	PSU-ERC-AC08 (QTY 4)	SDX1926Q-43	RAYCAP DISCONNECT
		E12	17	ERC 4449	ERC 4455		PSU-ERC-AC08 (QTY 3)	SDX1926Q-43	RAYCAP DISCONNECT
		E13	18	ERC 4449	ERC 220X (QTY 2)		PSU-ERC-AC08 (QTY 3)	SDX1926Q-43	RAYCAP DISCONNECT
		E14	19	ERC 4478 (QTY 2)			PSU-ERC-AC08 (QTY 2)	SDX1926Q-43	RAYCAP DISCONNECT
		E15	20	ERC 4426 (QTY 2)			PSU-ERC-AC08 (QTY 2)	SDX1926Q-43	RAYCAP DISCONNECT
		E16	21	ERC 4415 (QTY 2)			PSU-ERC-AC08 (QTY 2)	SDX1926Q-43	RAYCAP DISCONNECT
		E17	22	ERC 4461	ERC 4471		PSU-ERC-AC08 (QTY 2)	SDX1926Q-43	RAYCAP DISCONNECT
4		3		2		1			

4



3

2



1

REAR WALL EQUIPMENT MOUNTING OPTIONS

EQUIPMENT	LEFT BACK WALL	RIGHT BACK WALL
ERC 220X	X	
PSU-ERC-AC08	X	

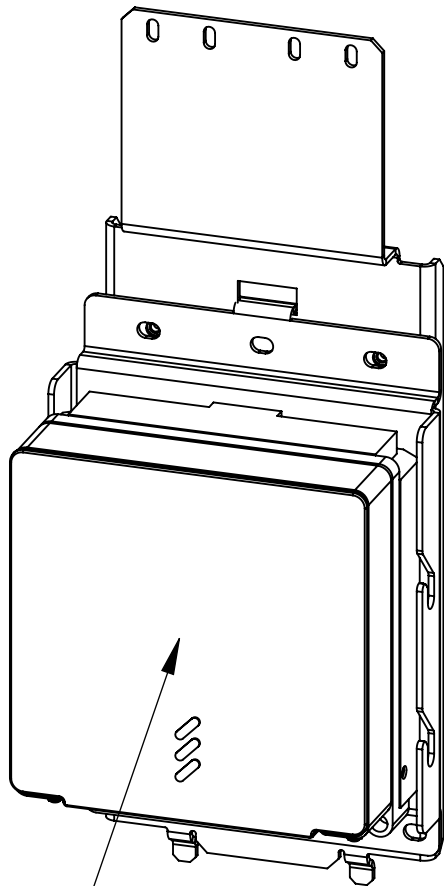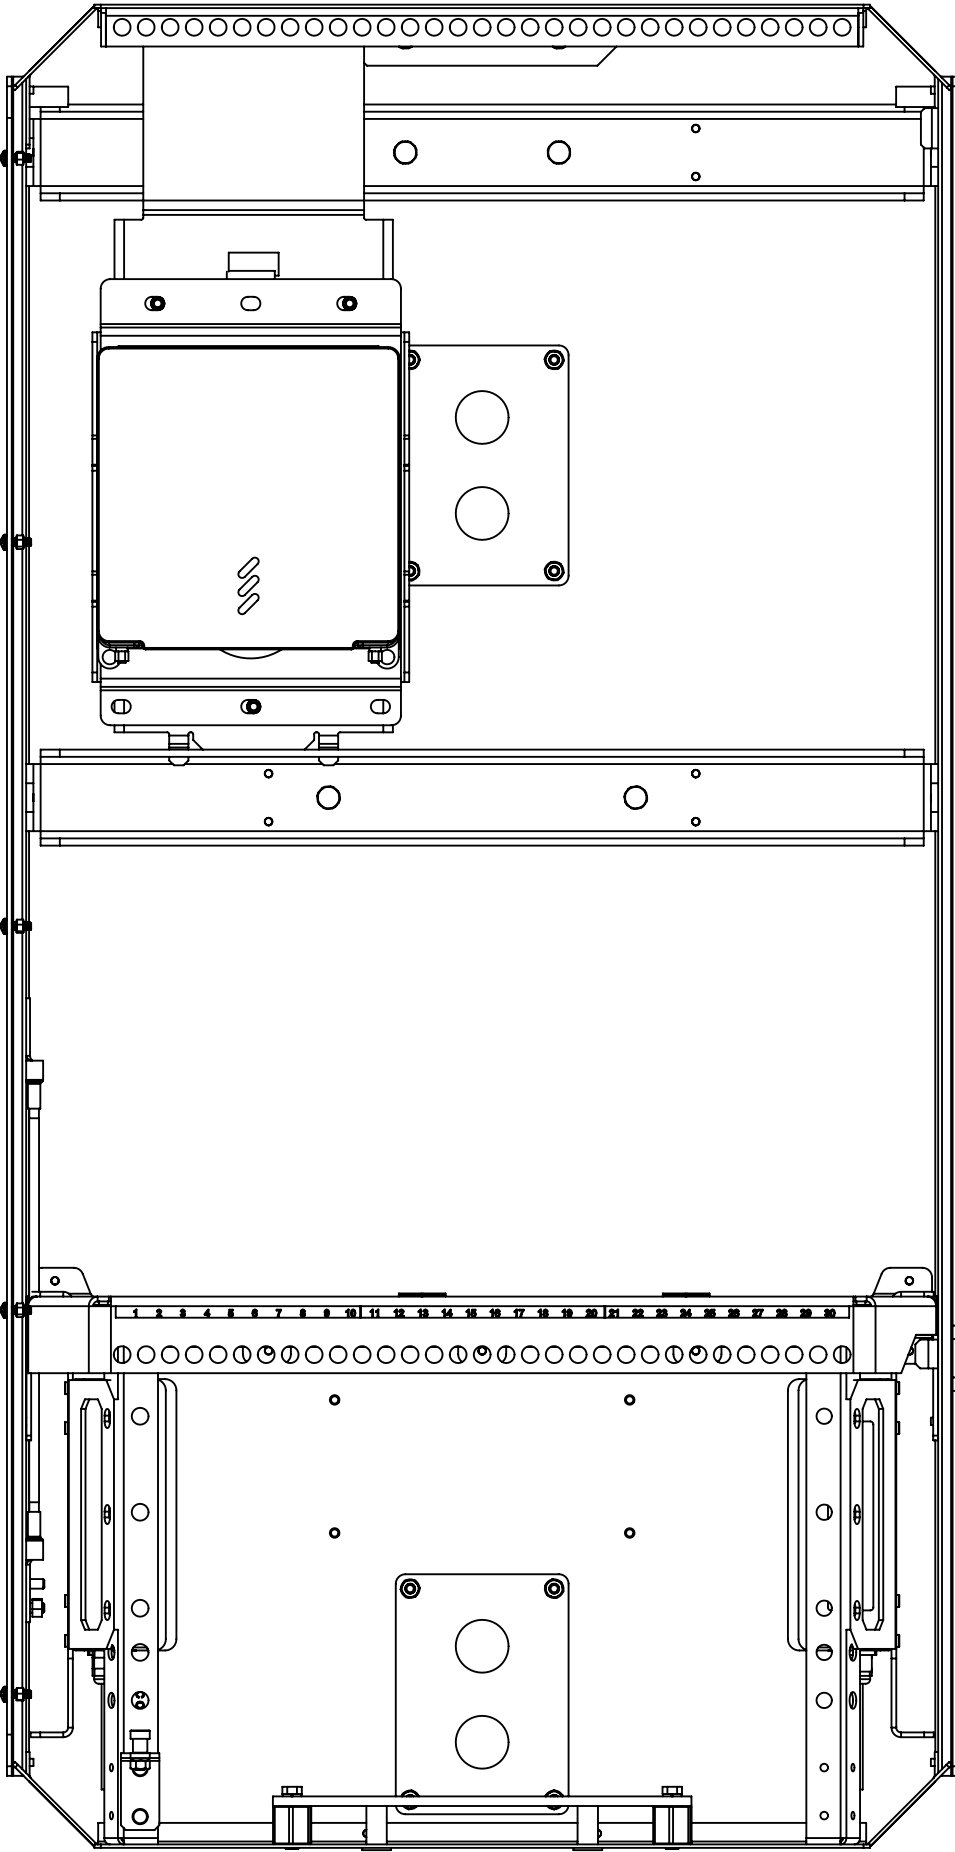

ERC 220X

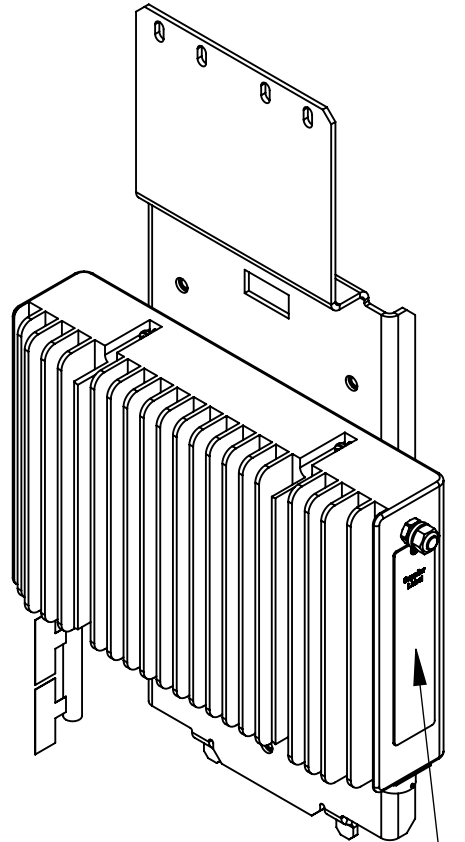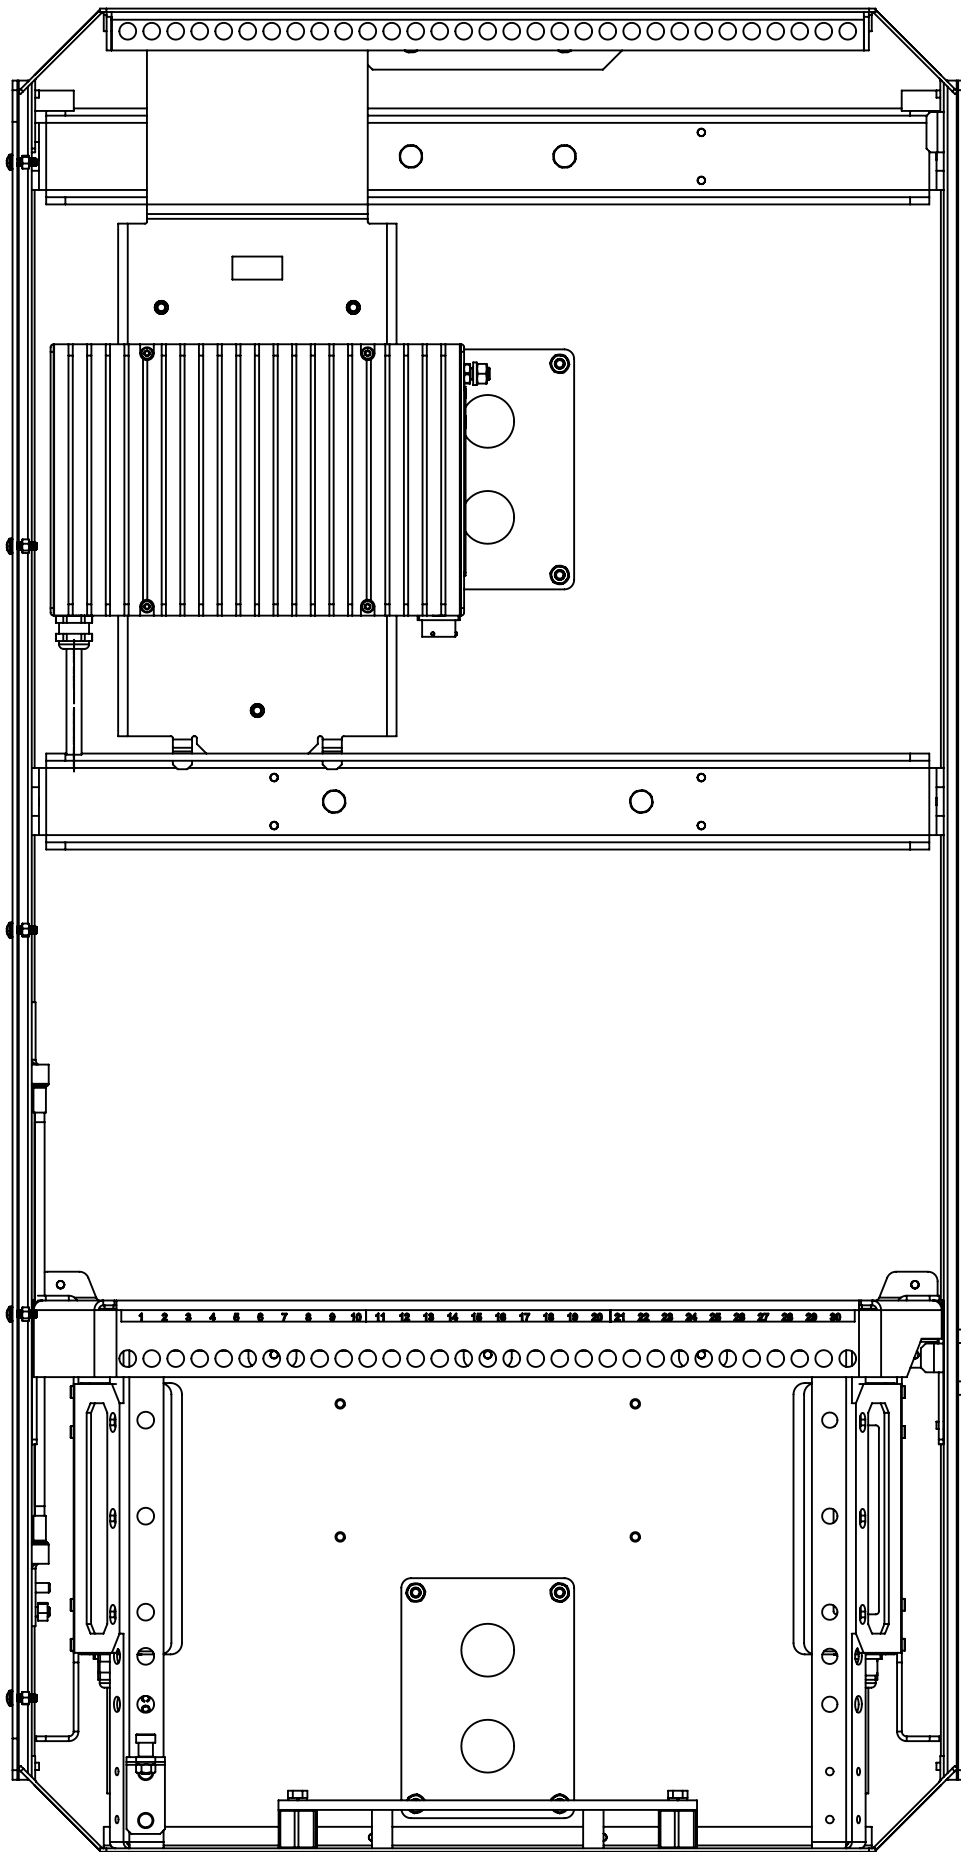


PSU-ERC-AC08



TITLE
ASSY,INSTALL INSTRUCTIONS,ERC,MV2


SIZE C	SCALE 1:4	DOCUMENT NO. 760249586ERC_MV2
------------------	---------------------	----------------------------------




DRAWING		
VERSION	STATUS	REVISION
03	RE	C

SHEET
3 OF 22

Confidential

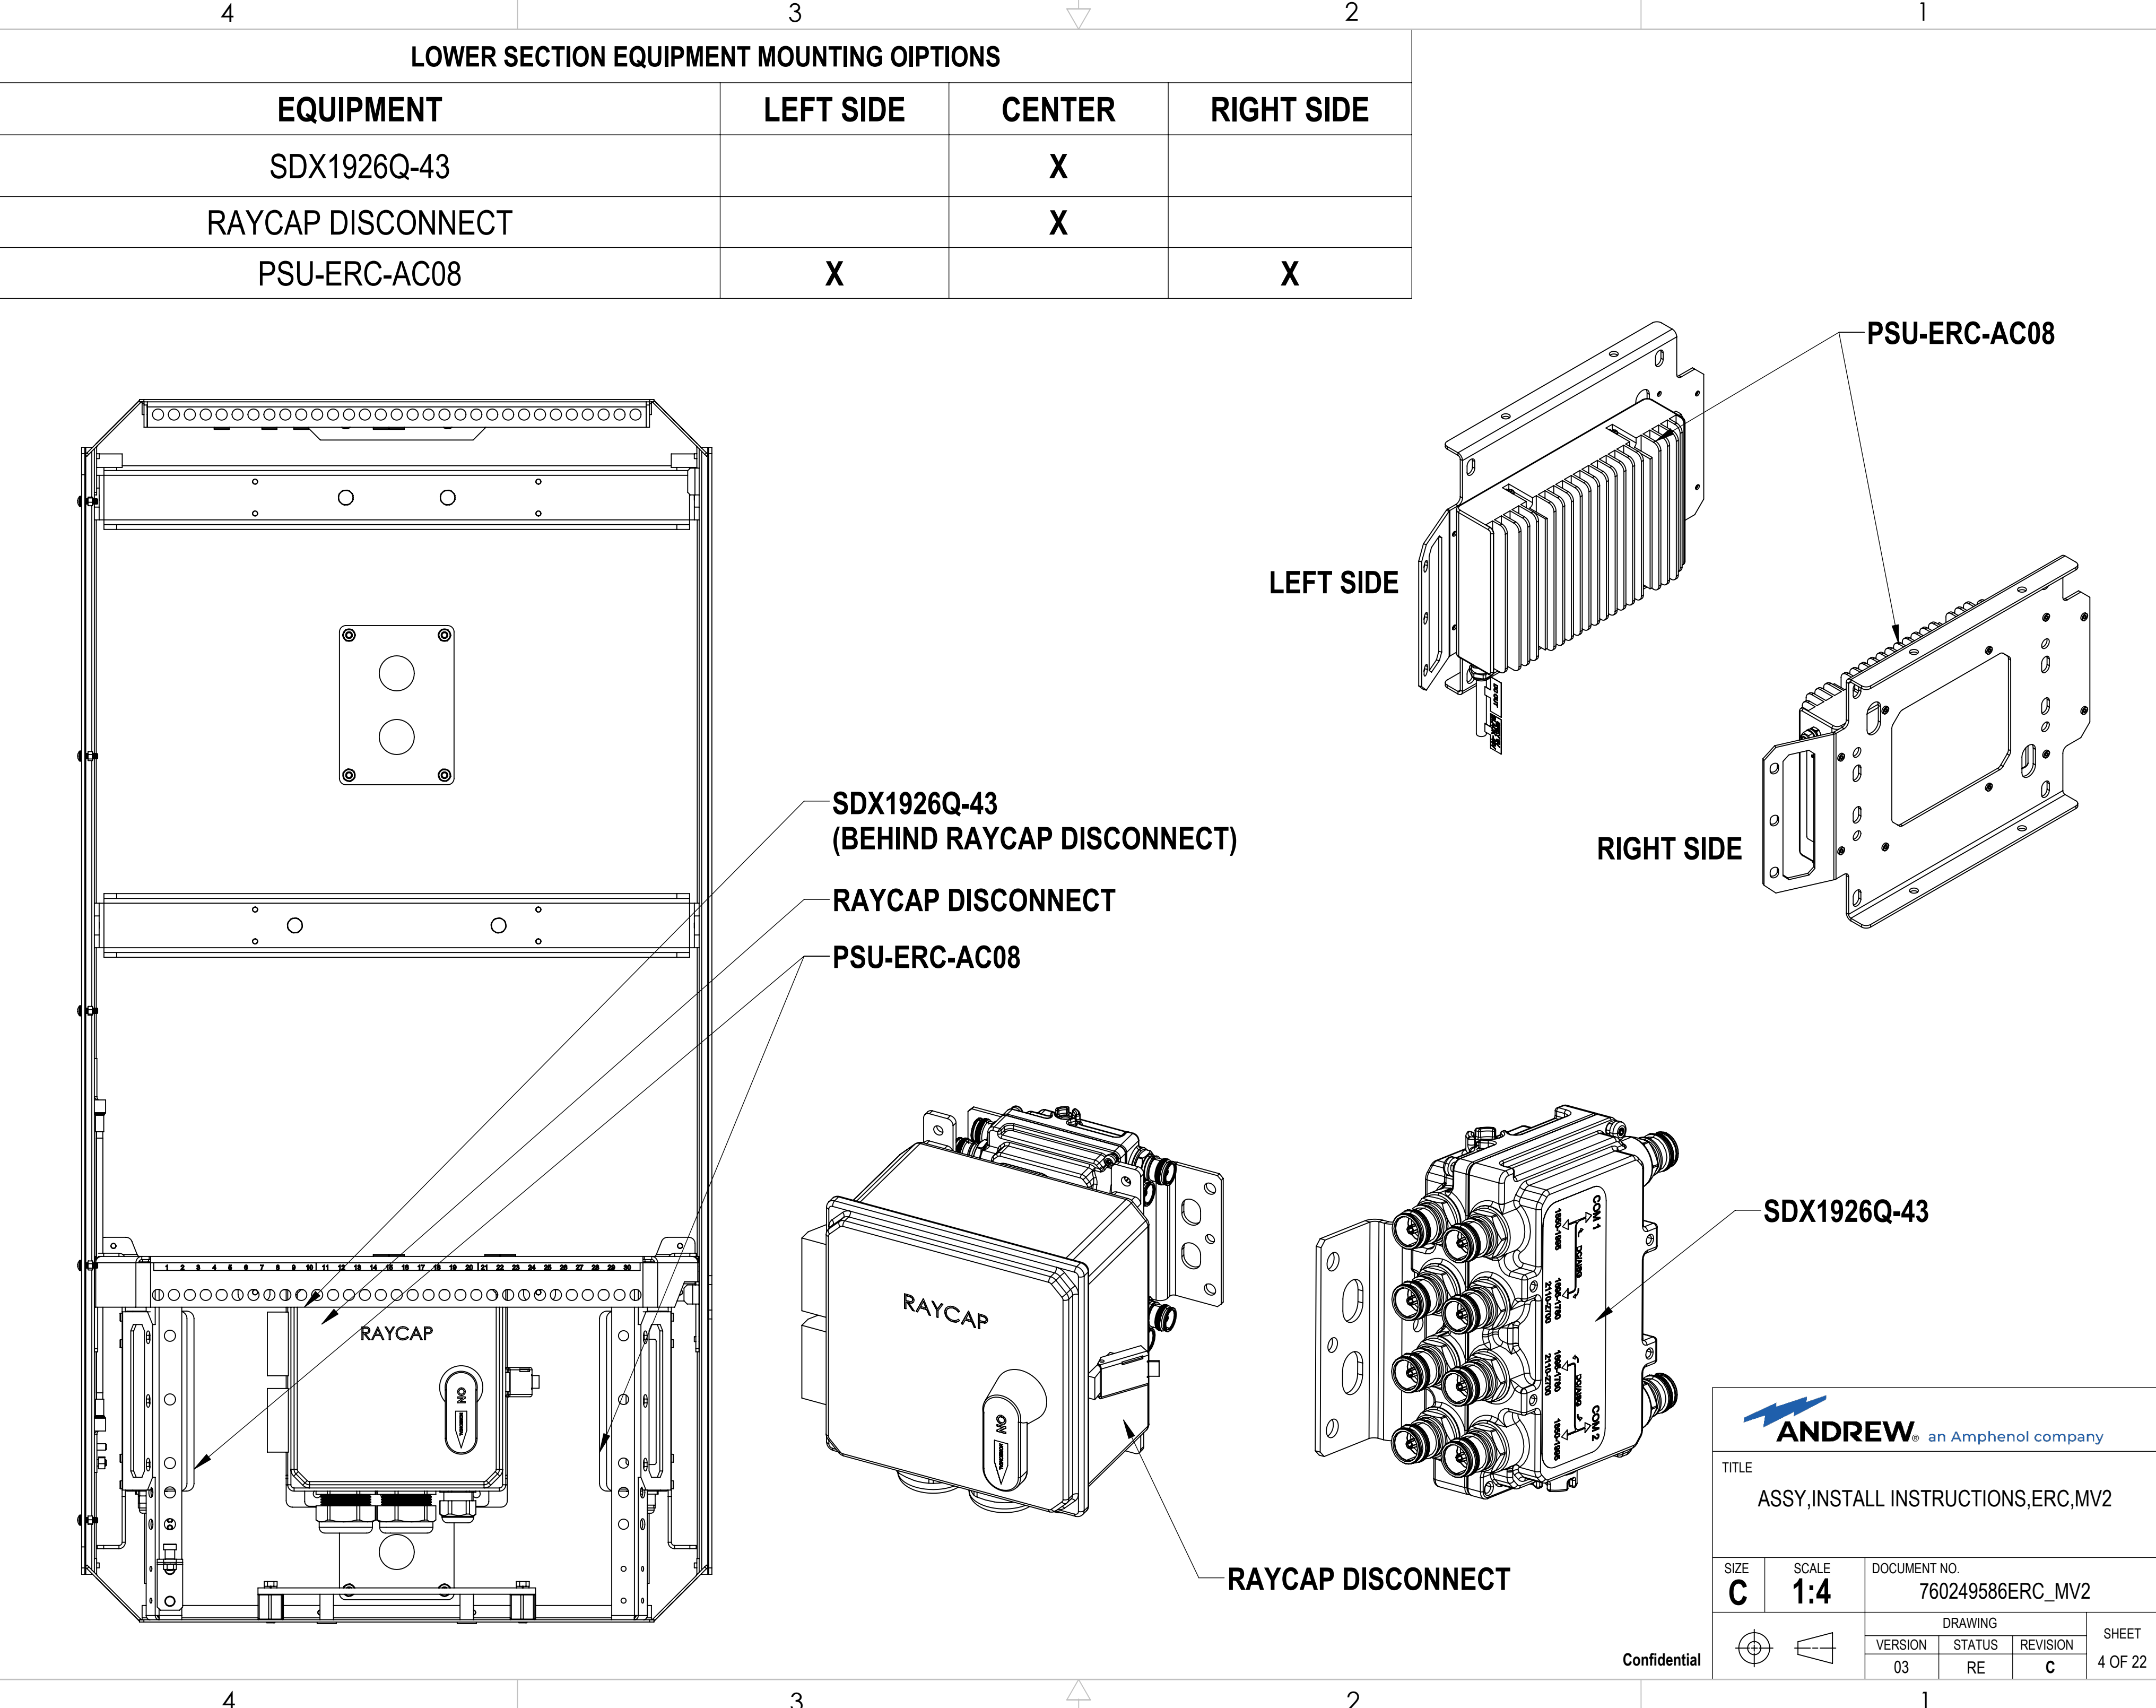


RRU BRACKET MOUNTING LOCATIONS

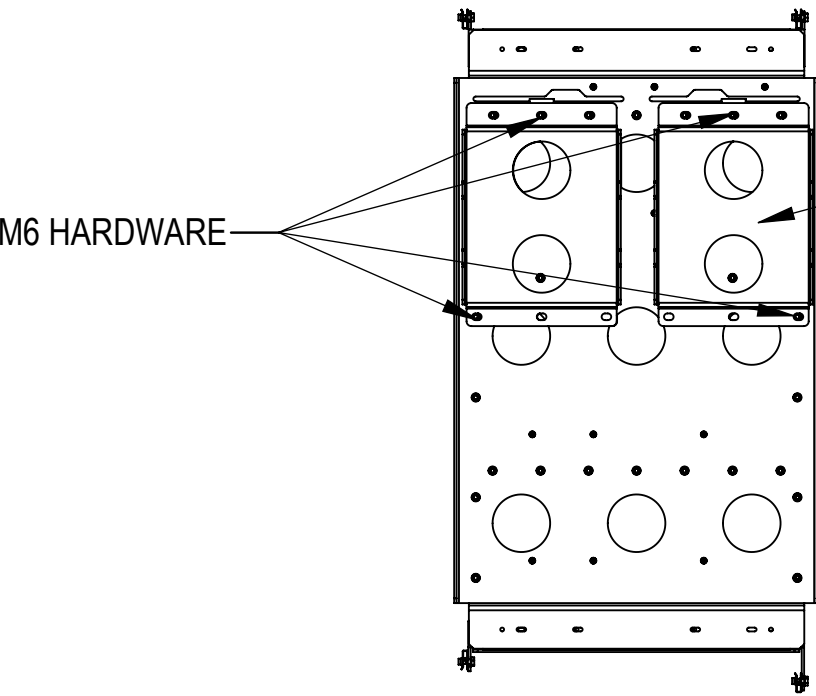


BRACKET TYPE #1

M6 HARDWARE

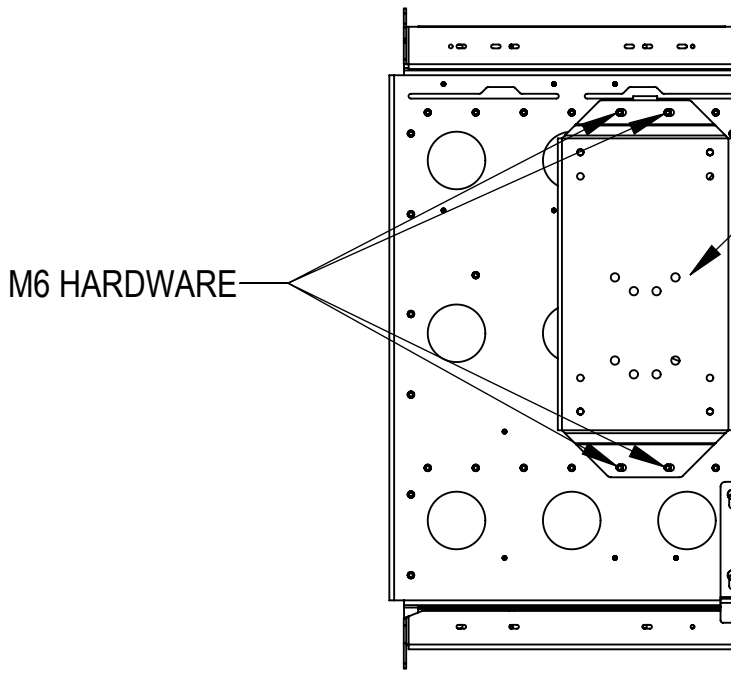


BRACKET TYPE #2

M6 HARDWARE

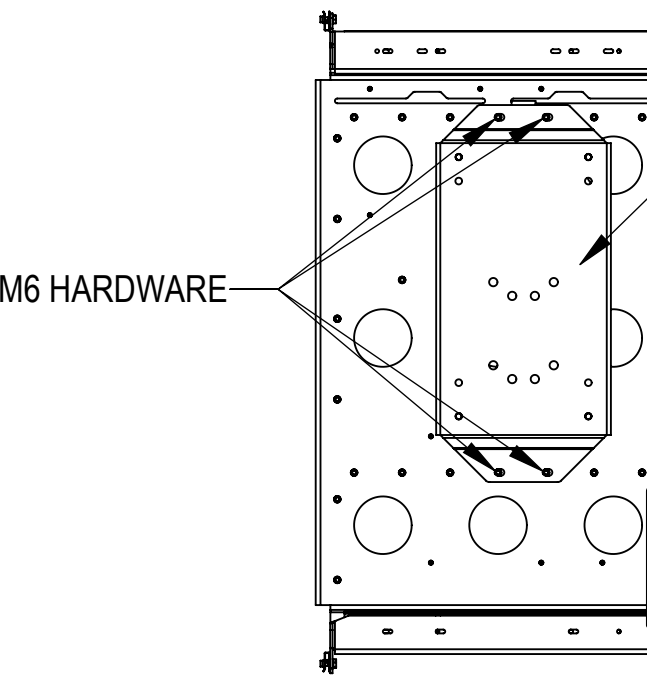


BRACKET TYPE #2

M6 HARDWARE

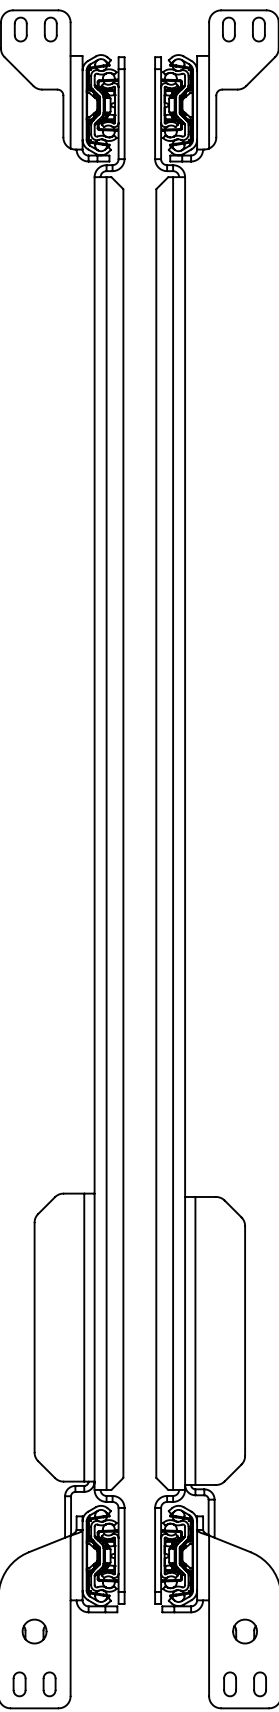


SLIDING BLADE ASSEMBLY
(FRONT VIEW)

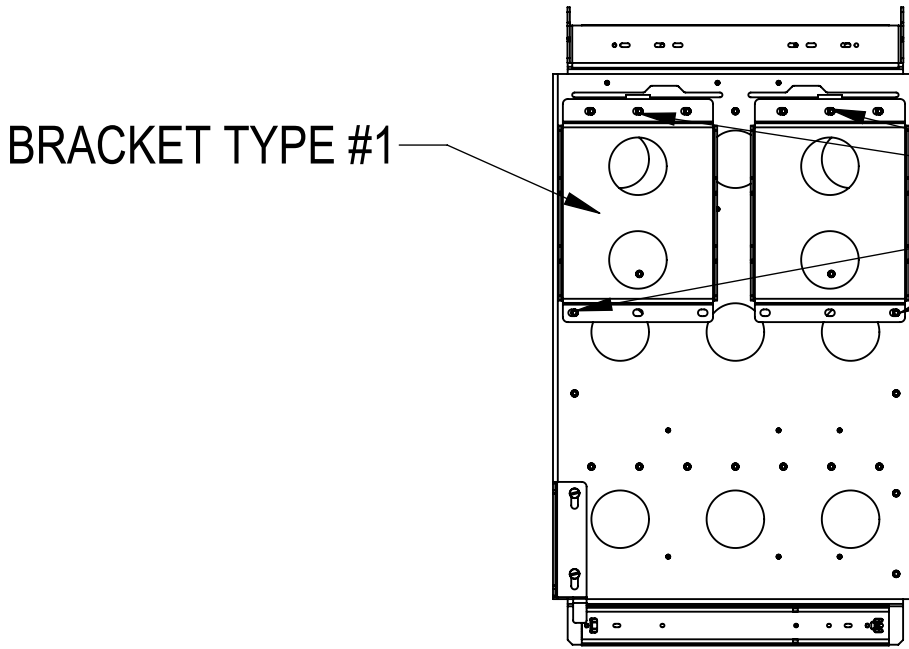


BRACKET TYPE #1

M6 HARDWARE

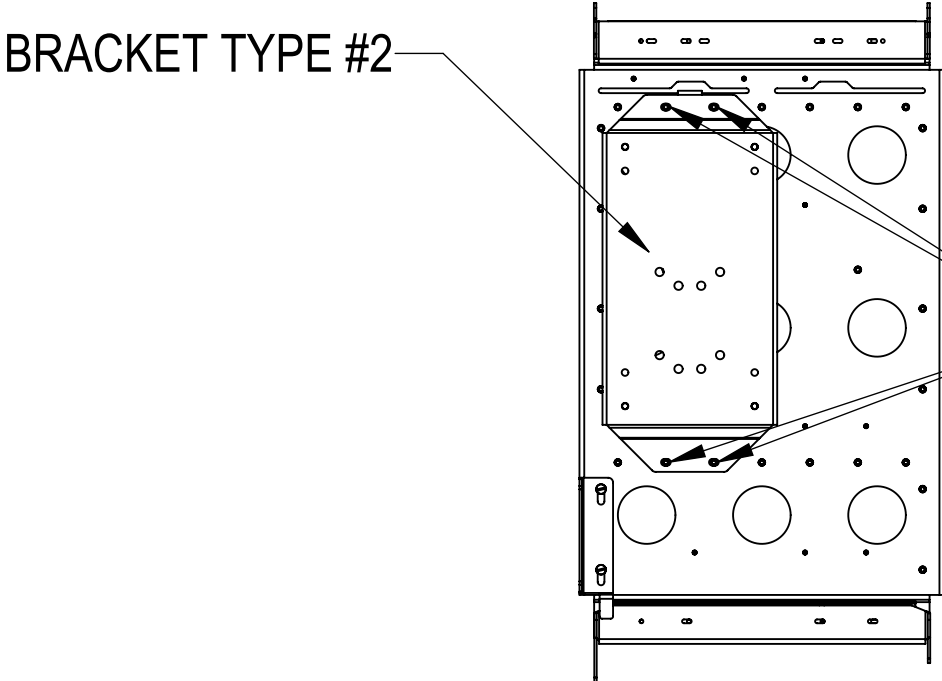

BRACKET TYPE #2

M6 HARDWARE

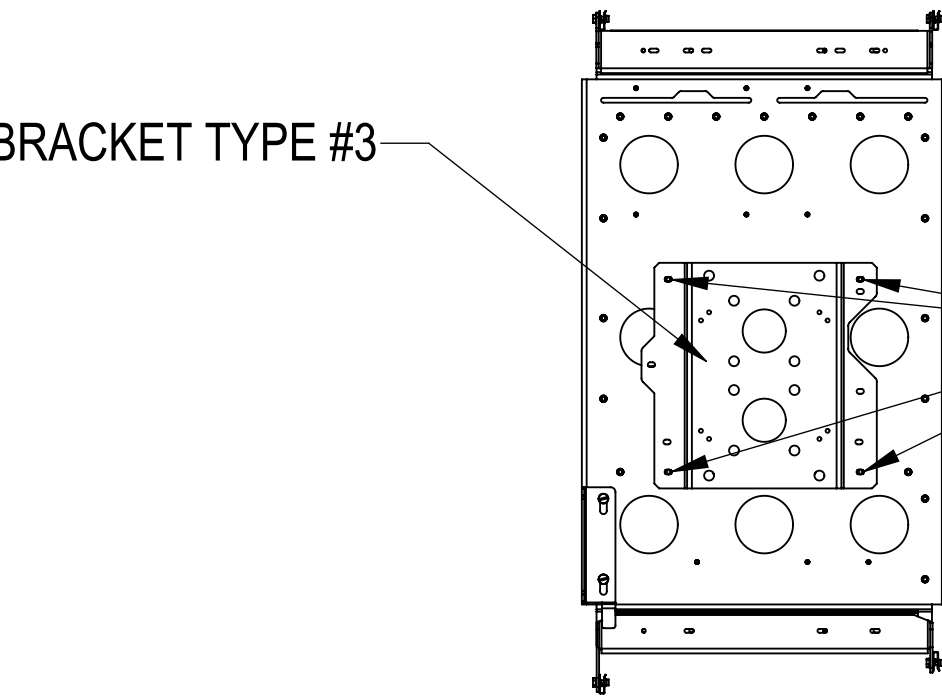

BRACKET TYPE #3

M6 HARDWARE

SLIDING BLADE ASSEMBLY
(LEFT FACING VIEW)

SLIDING BLADE ASSEMBLY
(RIGHT FACING VIEW)

ANDREW an Amphenol company

TITLE
ASSY,INSTALL INSTRUCTIONS,ERC,MV2

SIZE **C** SCALE **1:12** DOCUMENT NO.
760249586ERC_MV2



DRAWING
VERSION STATUS REVISION
03 RE C


SHEET
5 OF 22

Confidential


1

D

Confidential

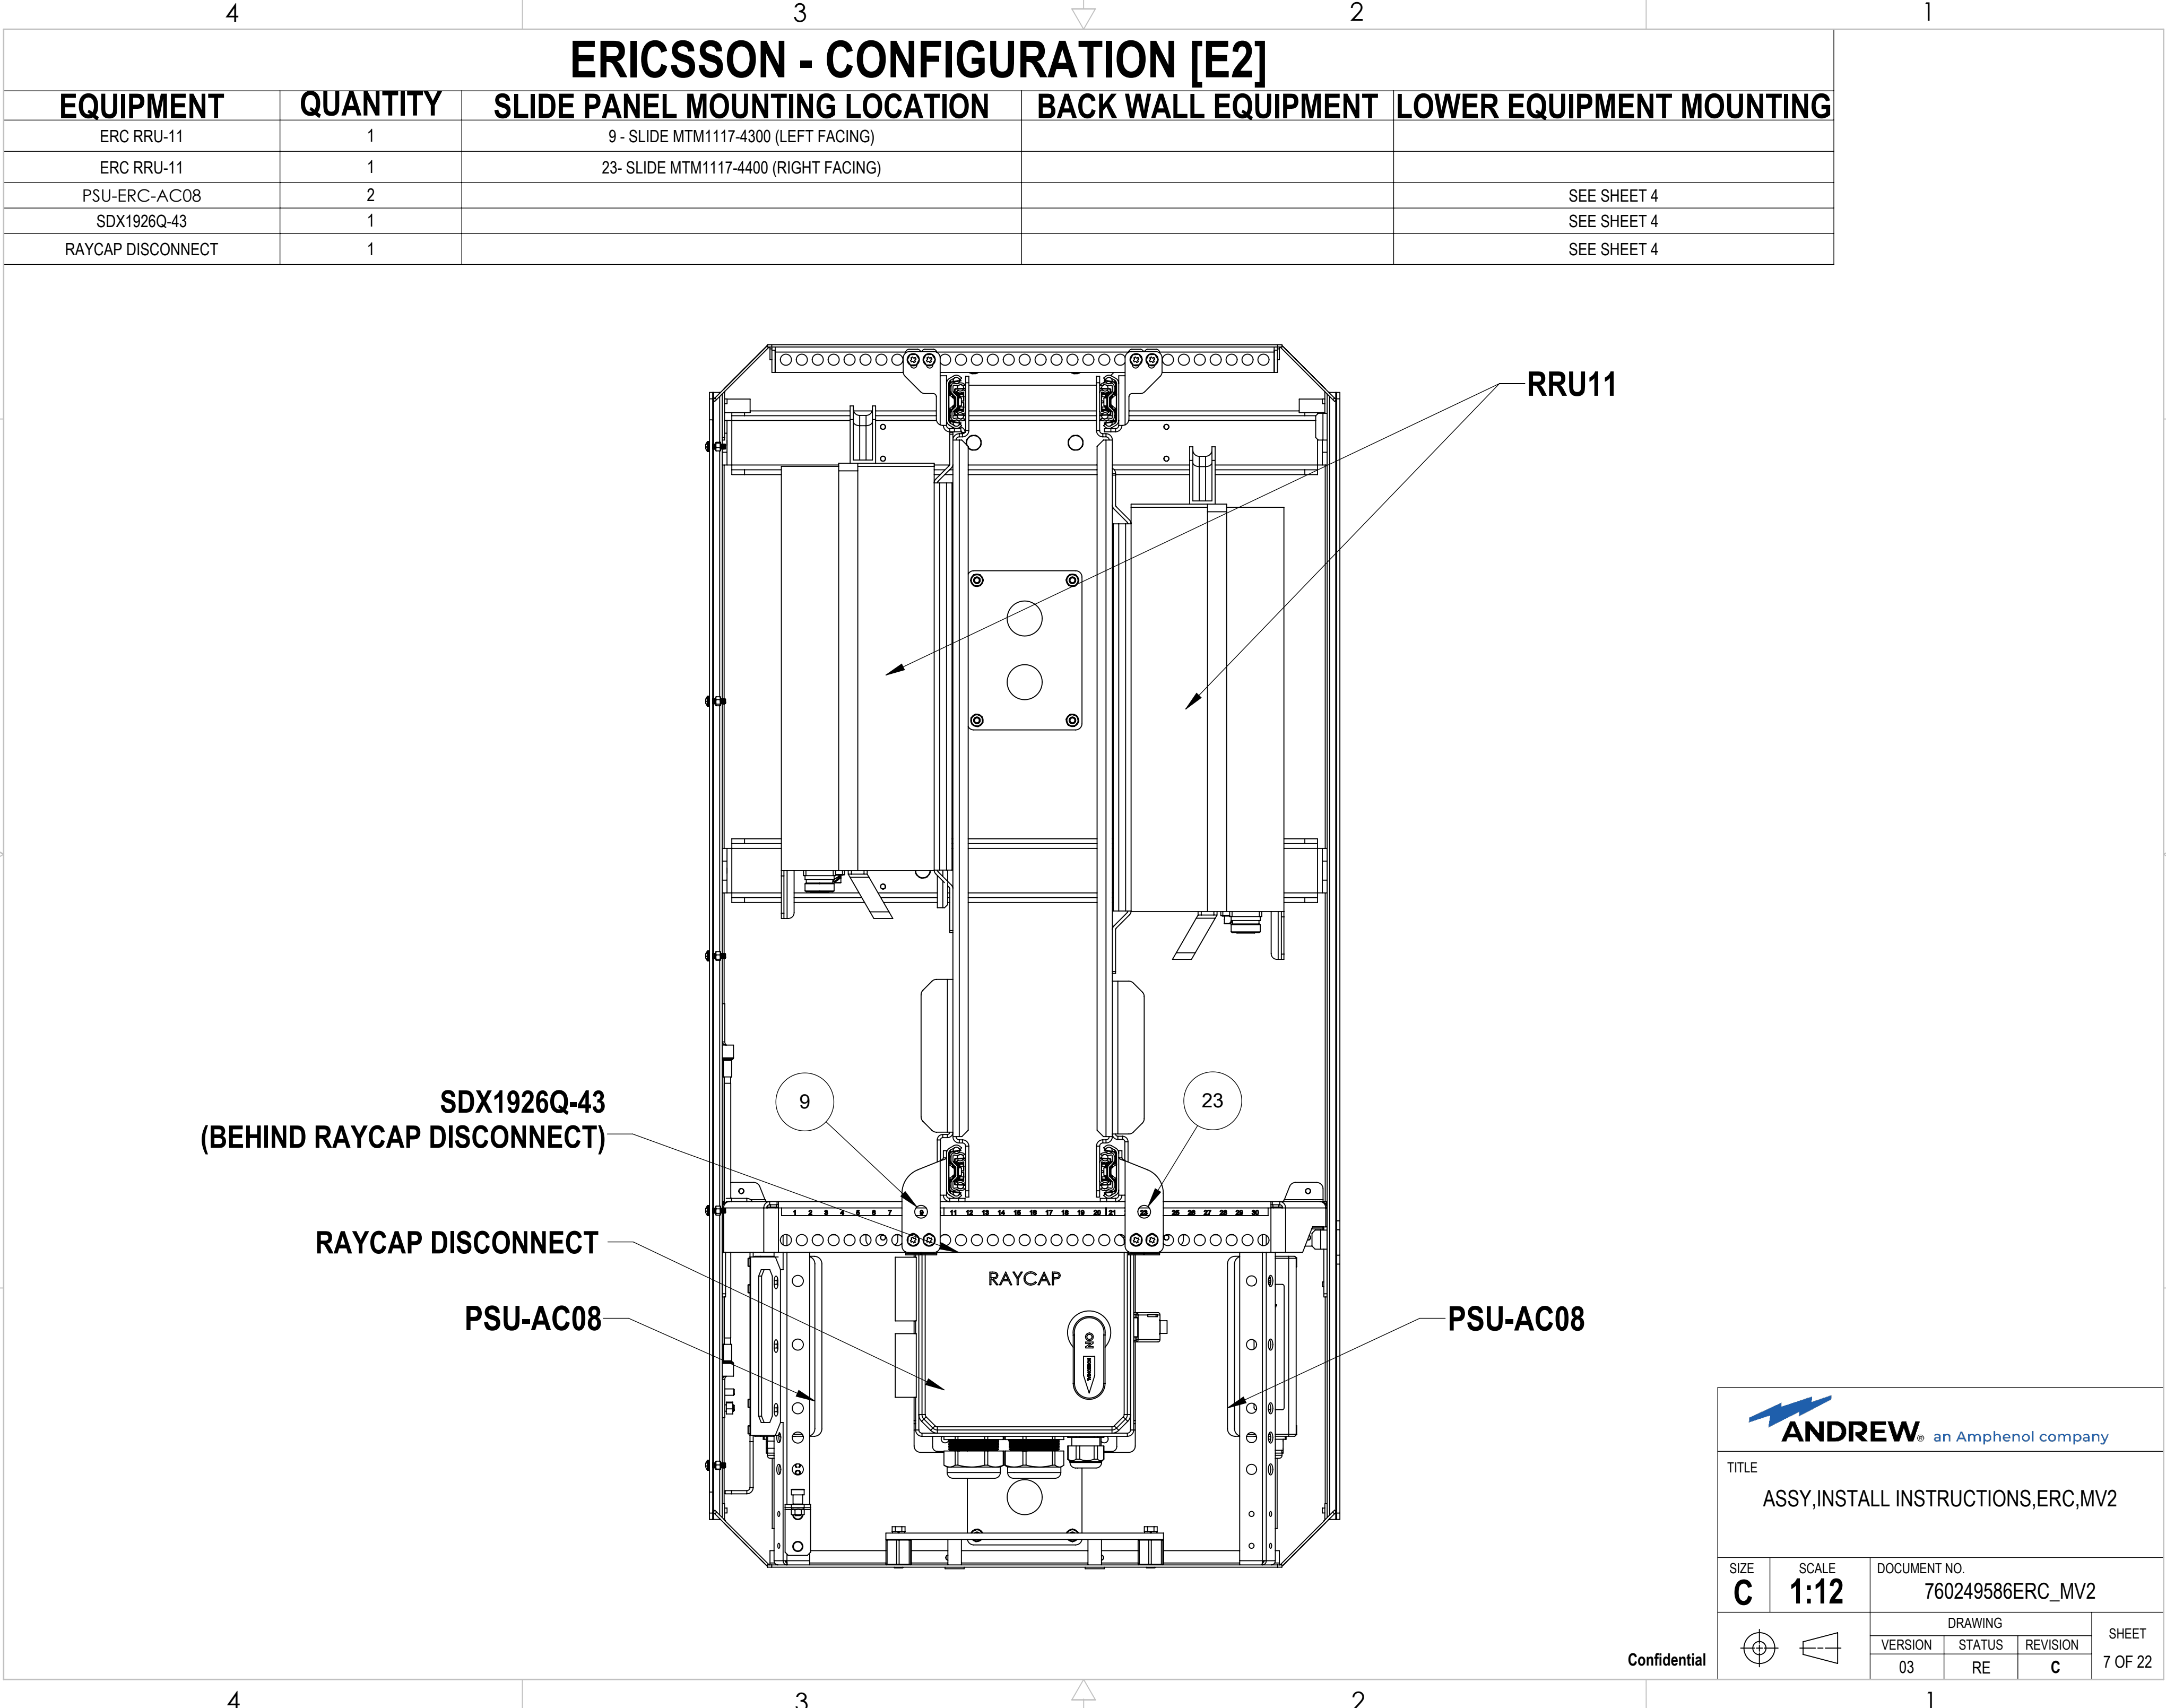

ERICSSON - CONFIGURATION [E3]				
EQUIPMENT	QUANTITY	SLIDE PANEL MOUNTING LOCATION	BACK WALL EQUIPMENT	LOWER EQUIPMENT MOUNTING
ERC 2203	2	5- SLIDE MTM1117-4300 (LEFT FACING)		
ERC 2203	2	18 - SLIDE MTM1117-4400 (RIGHT FACING)		
ERC 2203	2	27 - SLIDE MTM1117-4400 (RIGHT FACING)		
PSU-ERC-AC08	1		SEE SHEET 3	
PSU-ERC-AC08	2			SEE SHEET 4
SDX1926Q-43	1			SEE SHEET 4
RAYCAP DISCONNECT	1			SEE SHEET 4

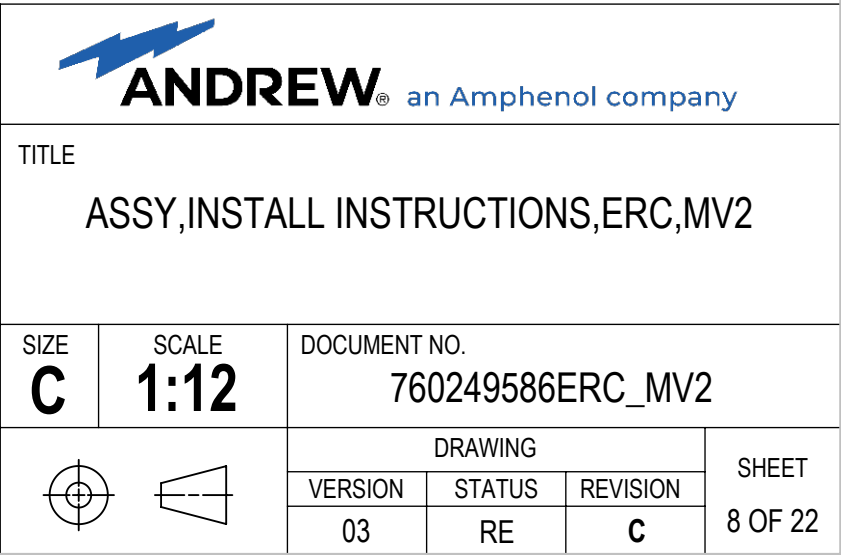

Confidential

4

3

2

1

ERICSSON - CONFIGURATION [E4]

EQUIPMENT	QUANTITY	SLIDE PANEL MOUNTING LOCATION	BACK WALL EQUIPMENT	LOWER EQUIPMENT MOUNTING
ERC 220X	1			SEE SHEET 3
ERC 4415	1	23 - SLIDE MTM1117-4400 (RIGHT FACING)		
PSU-ERC-AC08	2			SEE SHEET 4
SDX1926Q-43	1			SEE SHEET 4
RAYCAP DISCONNECT	1			SEE SHEET 4

220X

4415


SDX1926Q-43
(BEHIND RAYCAP DISCONNECT)

RAYCAP DISCONNECT

PSU-AC08


PSU-AC08

23

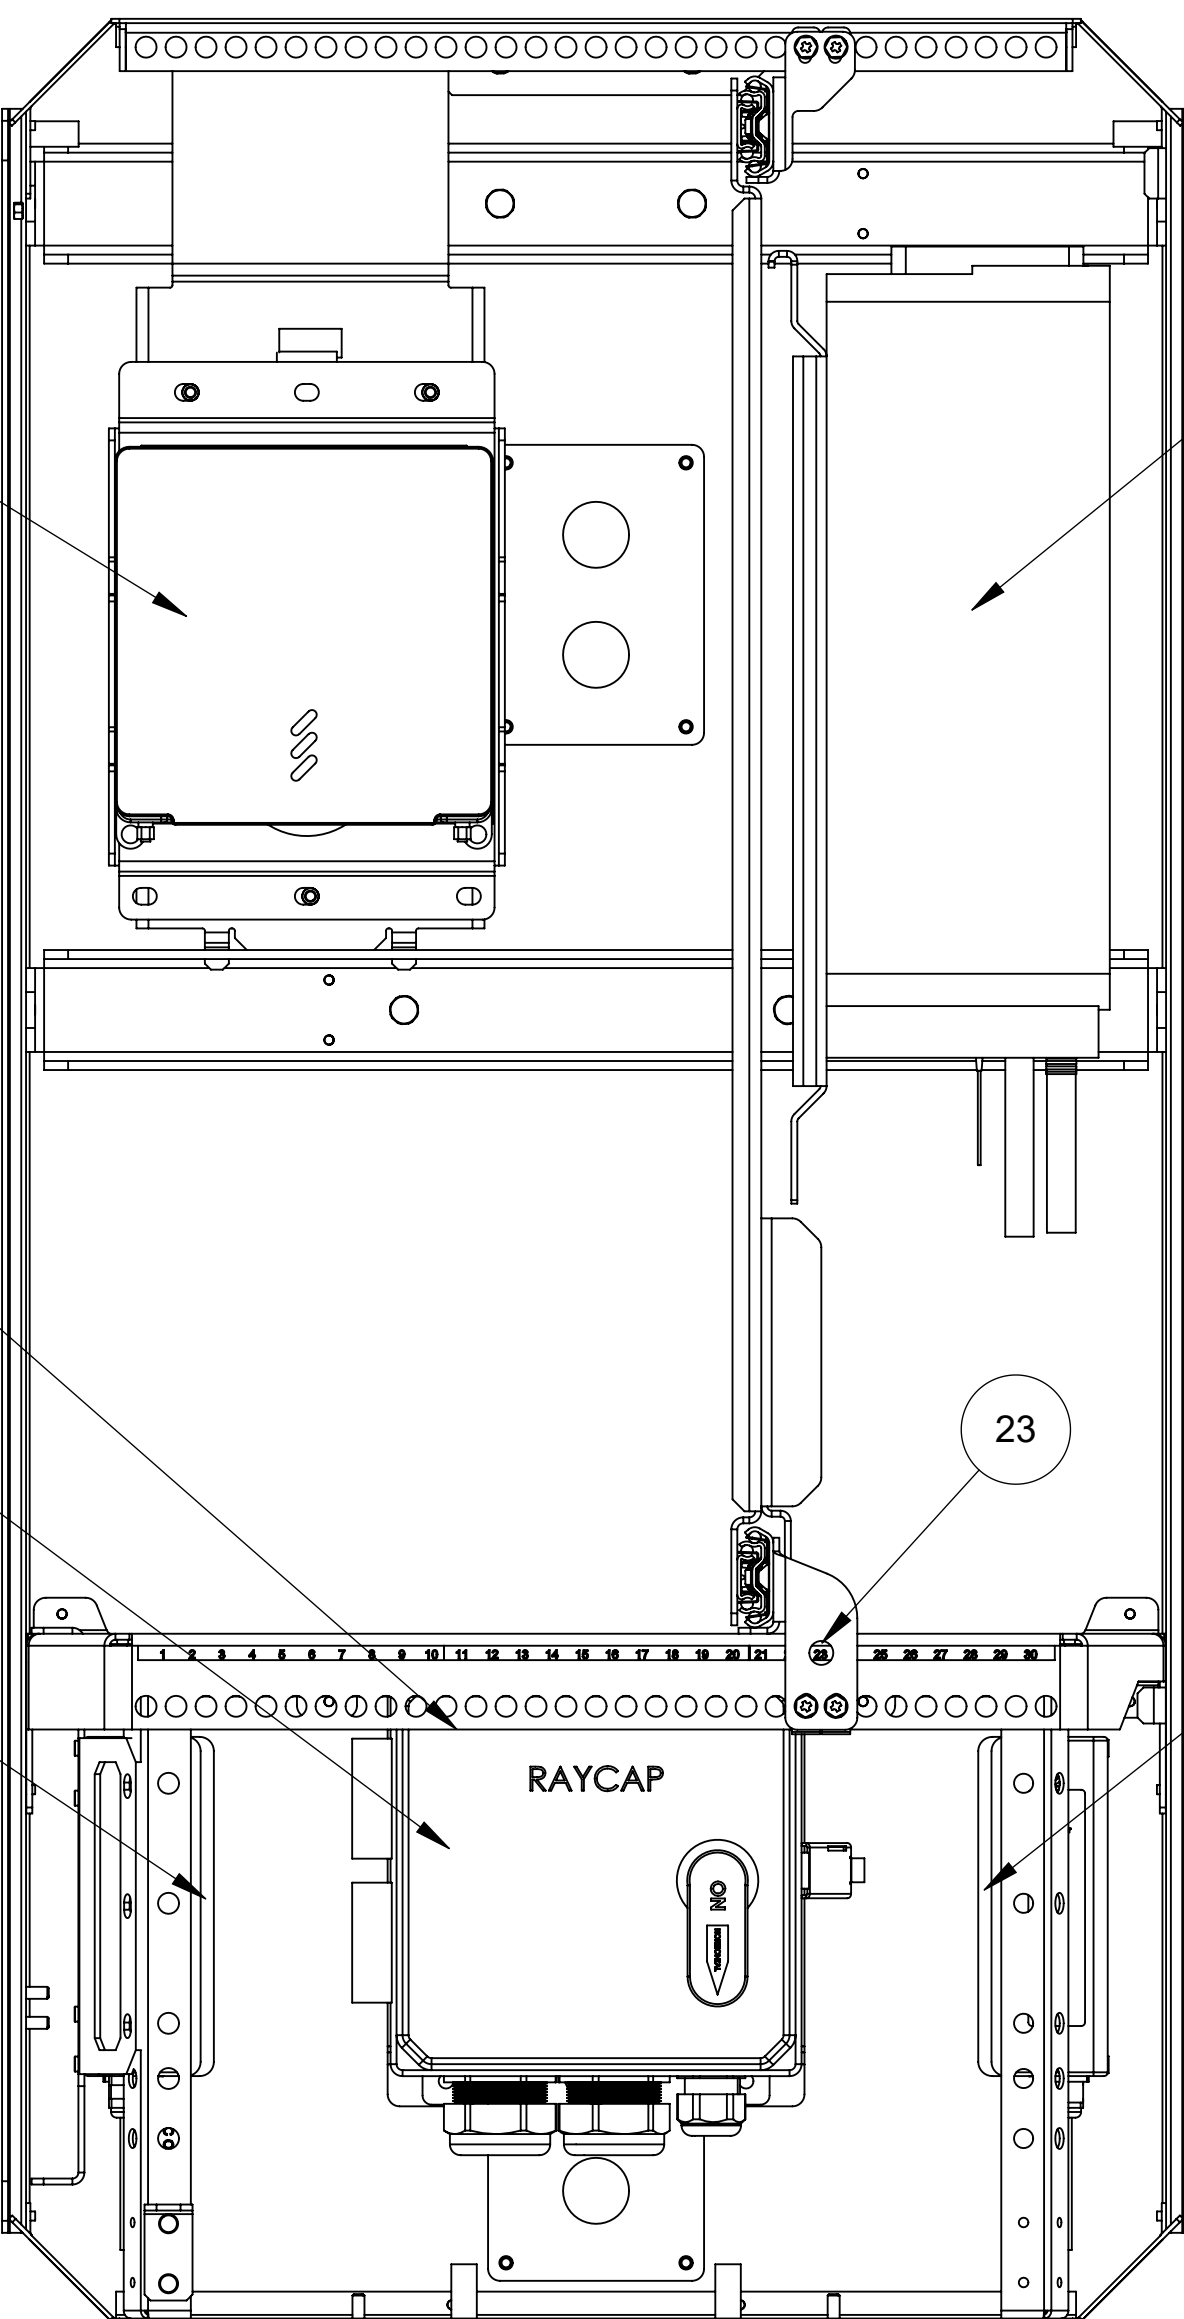

TITLE
ASSY,INSTALL INSTRUCTIONS,ERC,MV2

SIZE C	SCALE 1:12	DOCUMENT NO. 760249586ERC_MV2
------------------	----------------------	----------------------------------



DRAWING		
VERSION	STATUS	REVISION
03	RE	C

SHEET
9 OF 22

Confidential

4

3

2

1

4

3

2

1

ERICSSON - CONFIGURATION [E5]

EQUIPMENT	QUANTITY	SLIDE PANEL MOUNTING LOCATION	BACK WALL EQUIPMENT	LOWER EQUIPMENT MOUNTING
ERC 220X	1			SEE SHEET 3
PSU-ERC-AC08	2			SEE SHEET 4
ERC 4426	1	23 - SLIDE MTM1117-4400 (RIGHT FACING)		
SDX1926Q-43	1			SEE SHEET 4
RAYCAP DISCONNECT	1			SEE SHEET 4

D

D

C


C

B

B

A

A

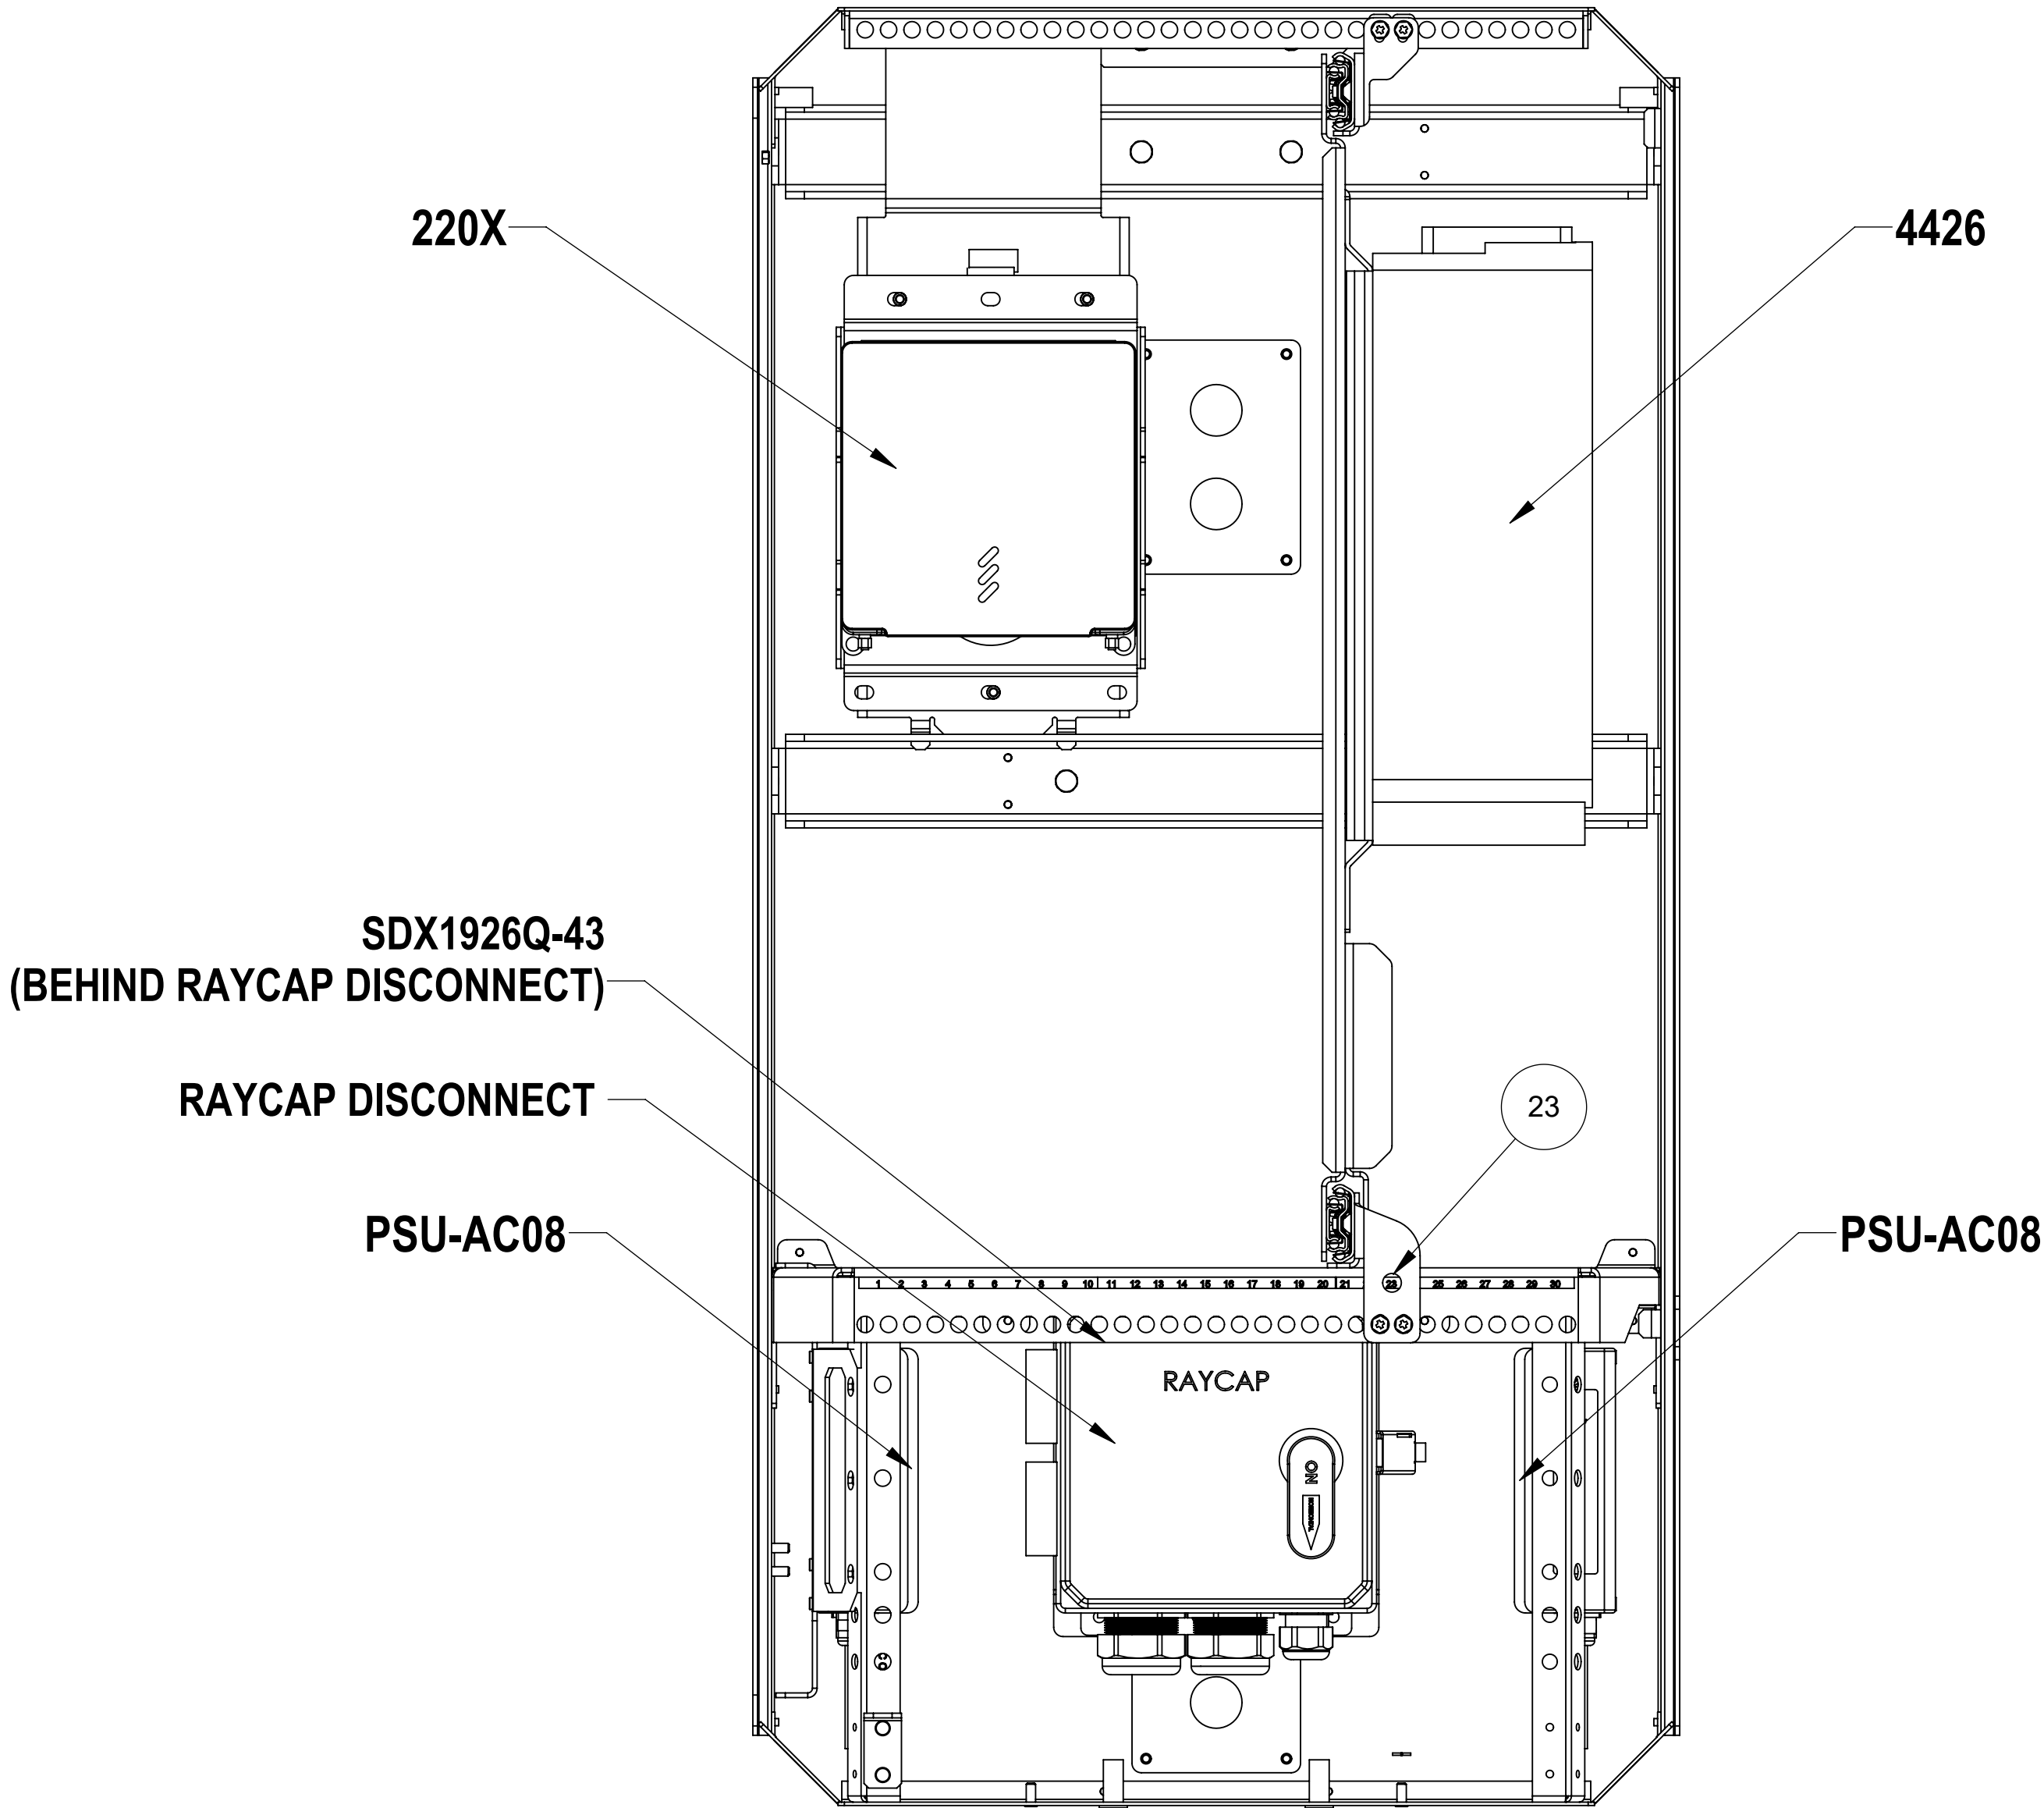



ANDREW® an Amphenol company

TITLE


ASSY,INSTALL INSTRUCTIONS,ERC,MV2

SIZE	SCALE	DOCUMENT NO.			
C	1:12	760249586ERC_MV2			
 		DRAWING			SHEET
		VERSION	STATUS	REVISION	
		03	RE	C	10 OF 22

Confidential

ERICSSON - CONFIGURATION [E6]

EQUIPMENT	QUANTITY	SLIDE PANEL MOUNTING LOCATION	BACK WALL EQUIPMENT	LOWER EQUIPMENT MOUNTING
ERC 8843	1	15 - SLIDE MTM1117-4300 (LEFT FACING)		
PSU-ERC-AC08	2			SEE SHEET 4
SDX1926Q-43	1			SEE SHEET 4
RAYCAP DISCONNECT	1			SEE SHEET 4

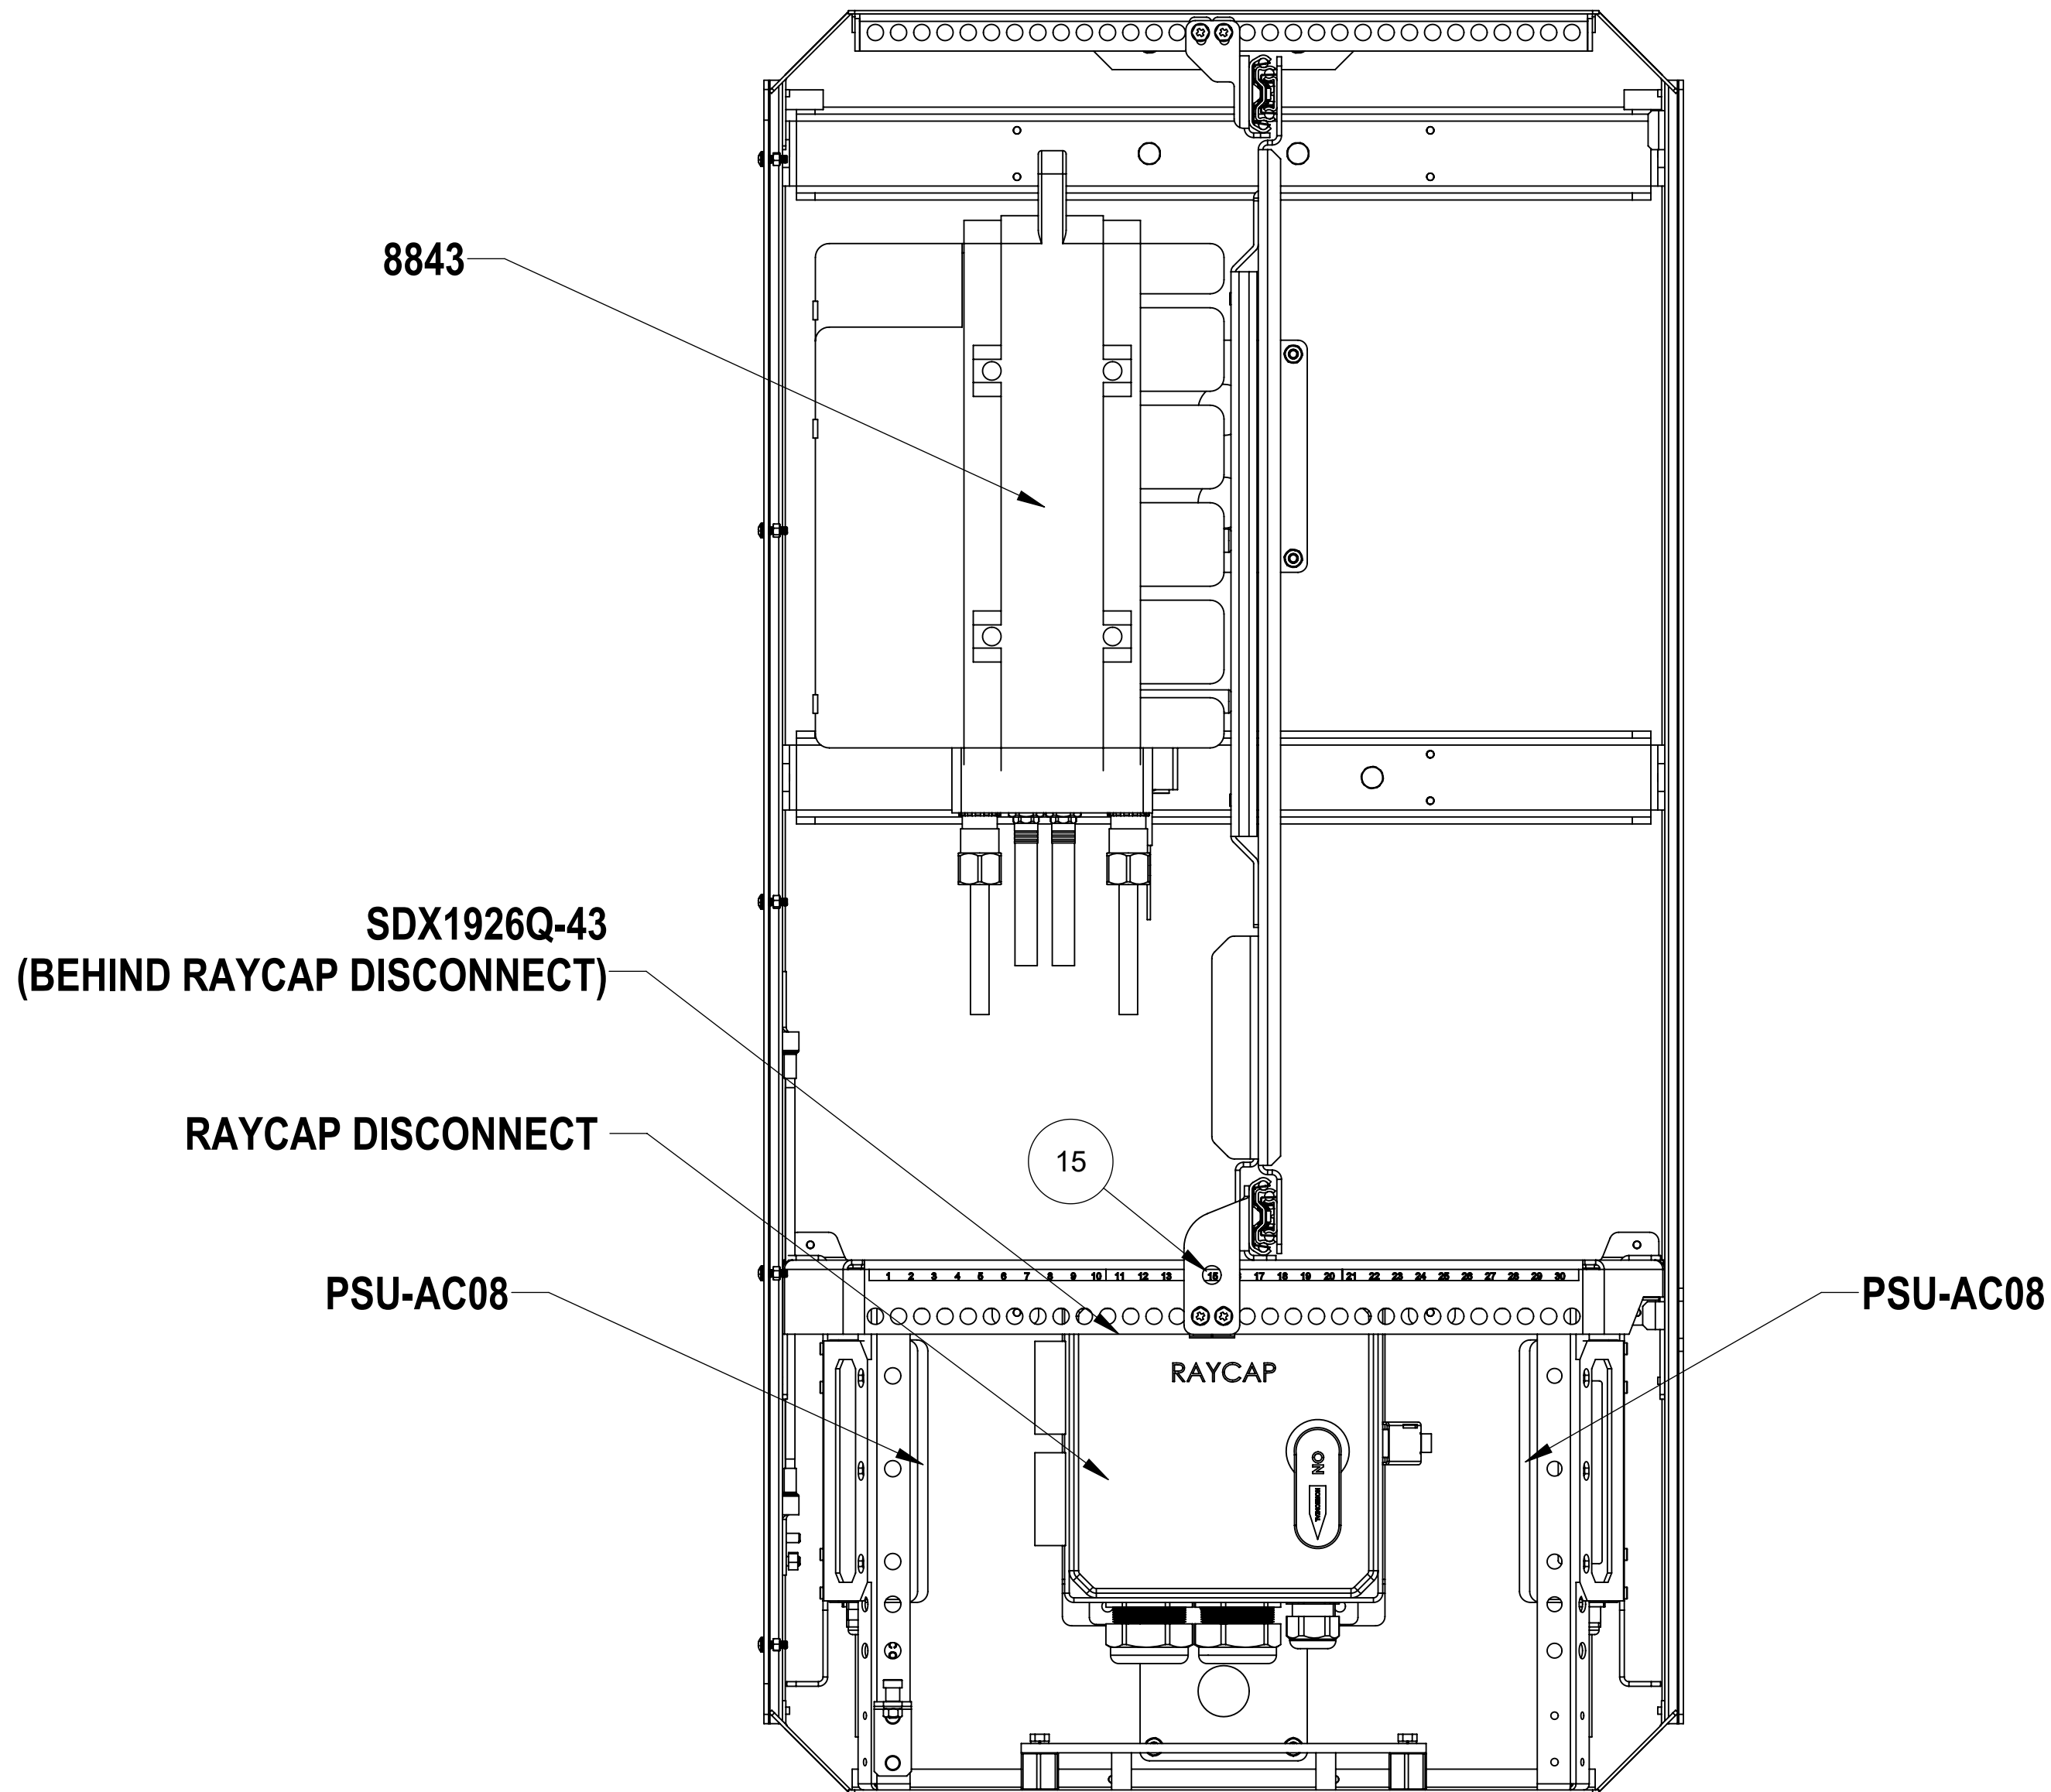


Confidential




TITLE	ASSY,INSTALL INSTRUCTIONS,ERC,MV2
-------	-----------------------------------

SIZE C	SCALE 1:12	DOCUMENT NO. 760249586ERC_MV2
------------------	----------------------	---

	DRAWING			SHEET 11 OF 2
	VERSION	STATUS	REVISION	
	03	RE	C	

1 OF 22

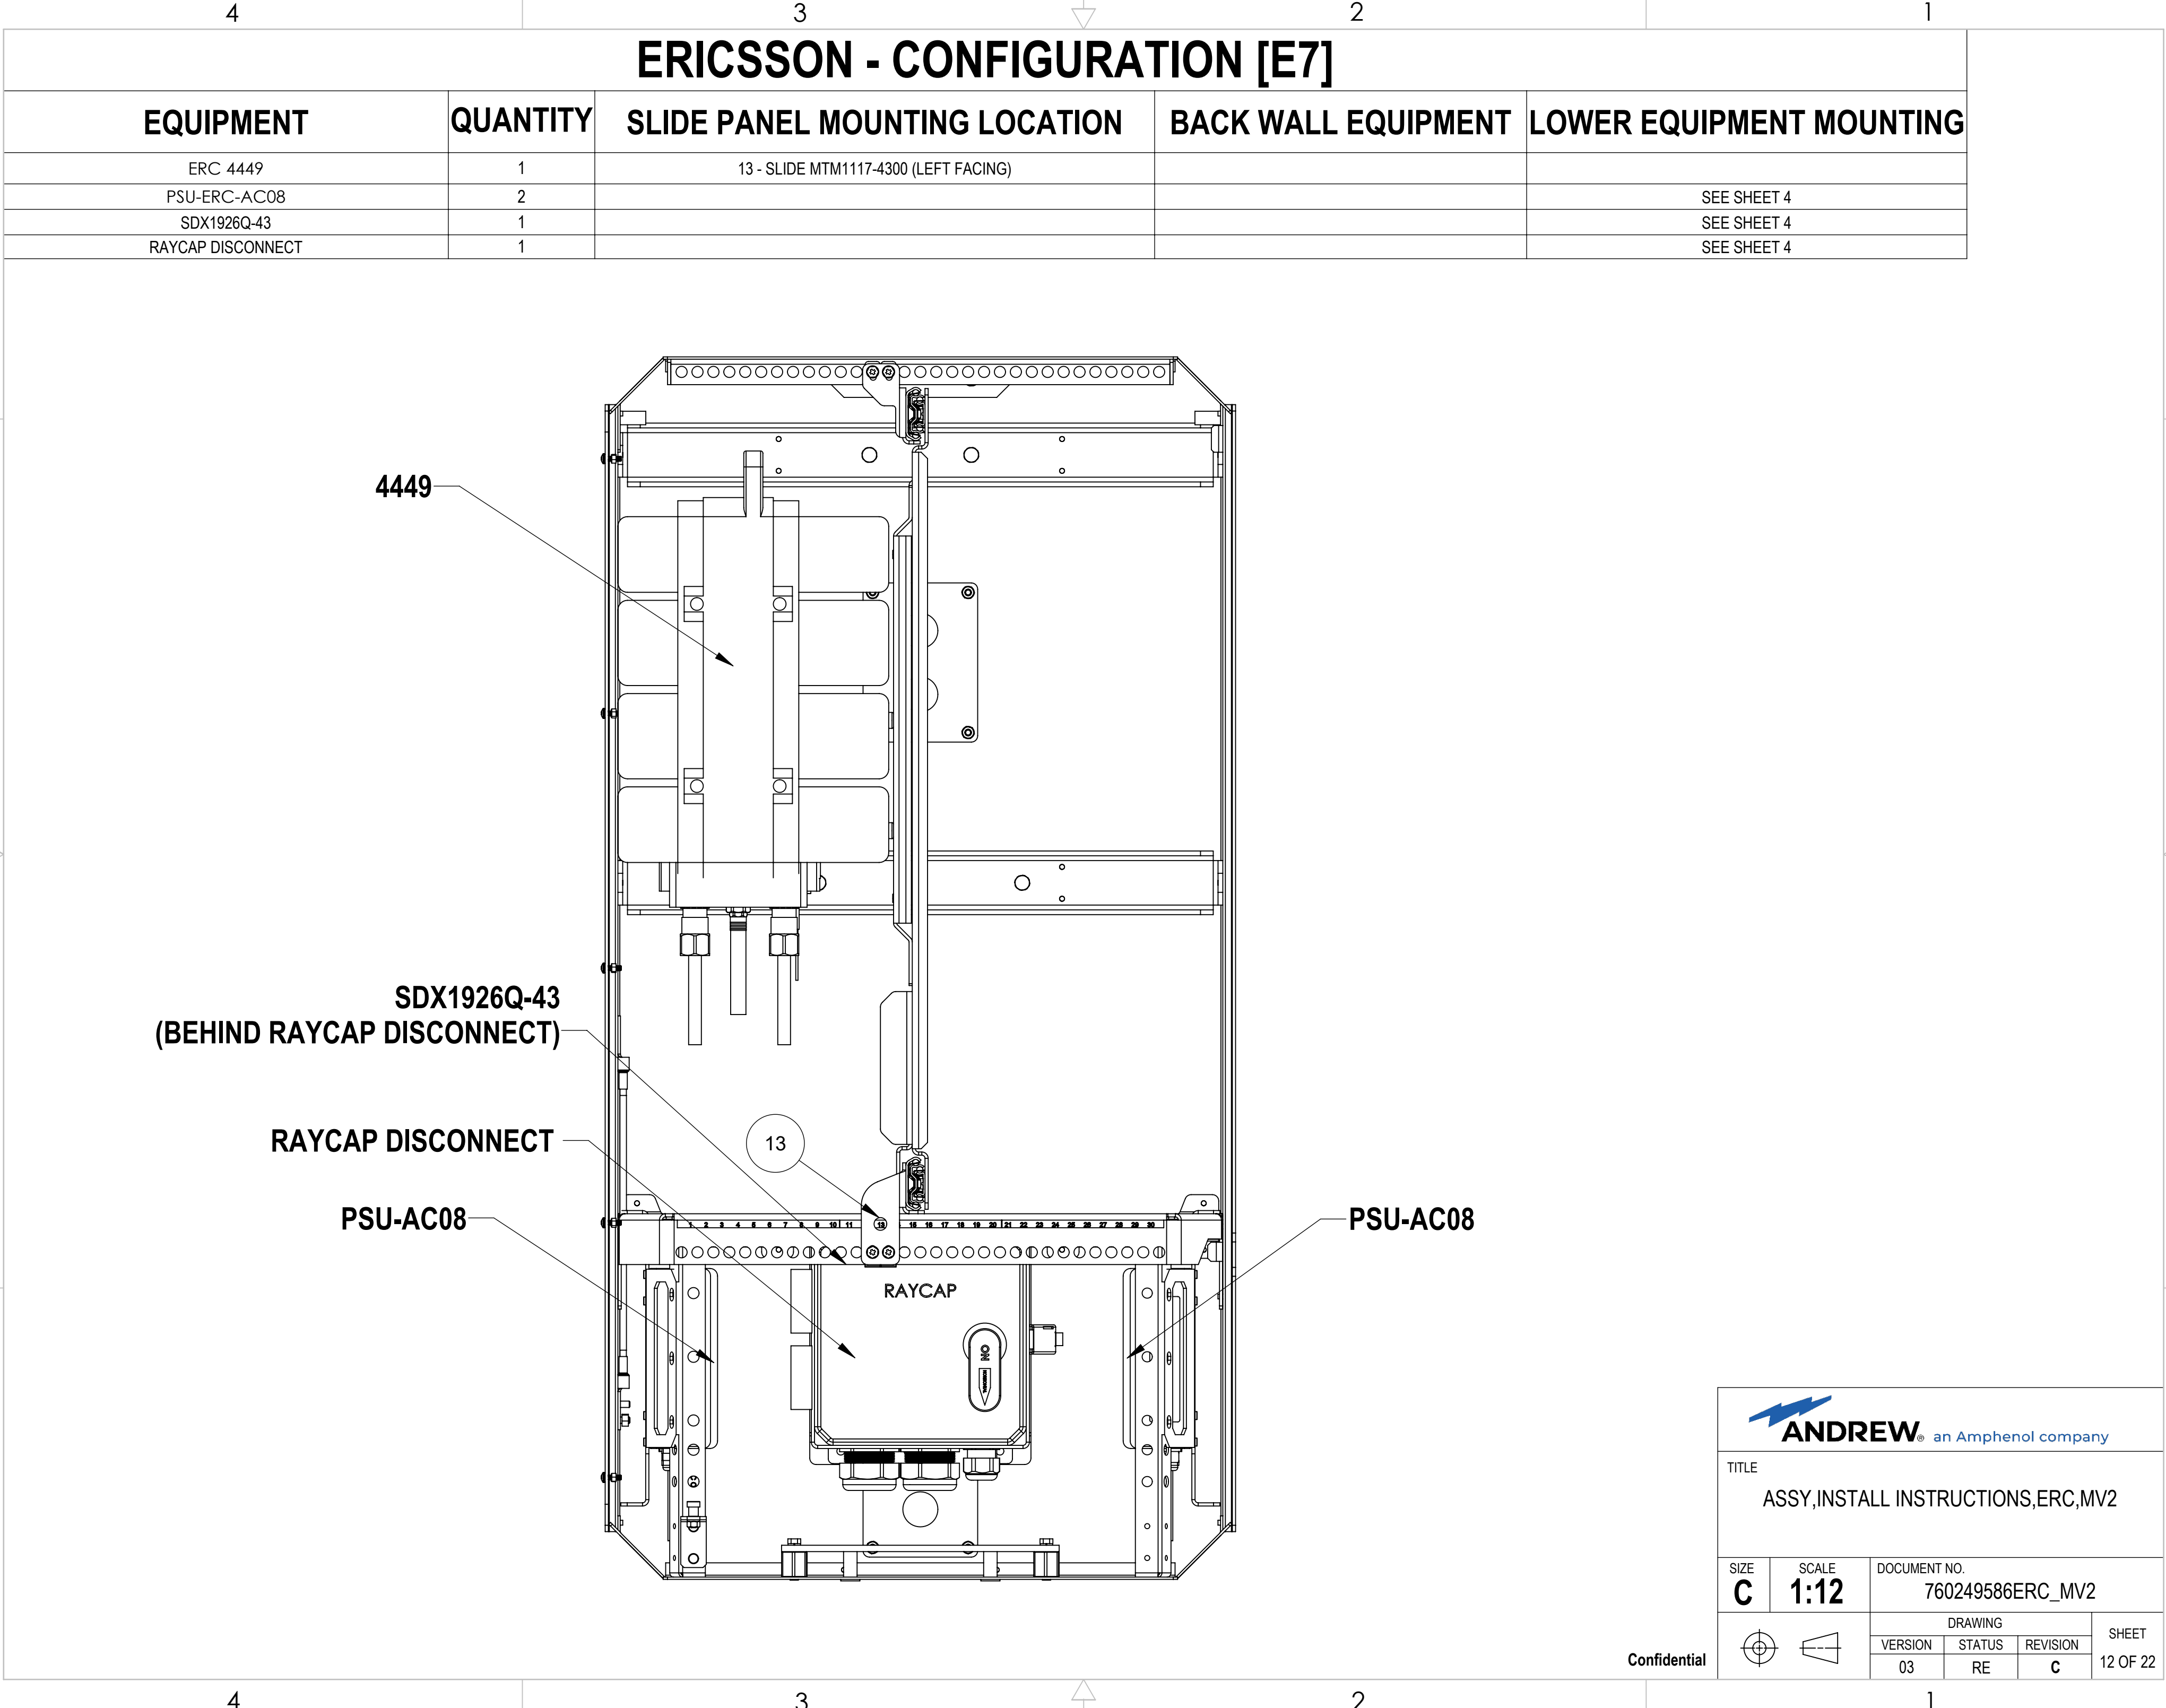

4


3

2

1

ERICSSON - CONFIGURATION [E8]

EQUIPMENT	QUANTITY	SLIDE PANEL MOUNTING LOCATION	BACK WALL EQUIPMENT	LOWER EQUIPMENT MOUNTING
ERC 4449	1	13- SLIDE MTM1117-4300 (LEFT FACING)		
ERC 8863	1	24 - SLIDE MTM1117-4400 (RIGHT FACING)		
PSU-ERC-AC08	2			SEE SHEET 4
PSU-ERC-AC08	1			SEE SHEET 3
SDX1926Q-43	1			SEE SHEET 4
RAYCAP DISCONNECT	1			SEE SHEET 4

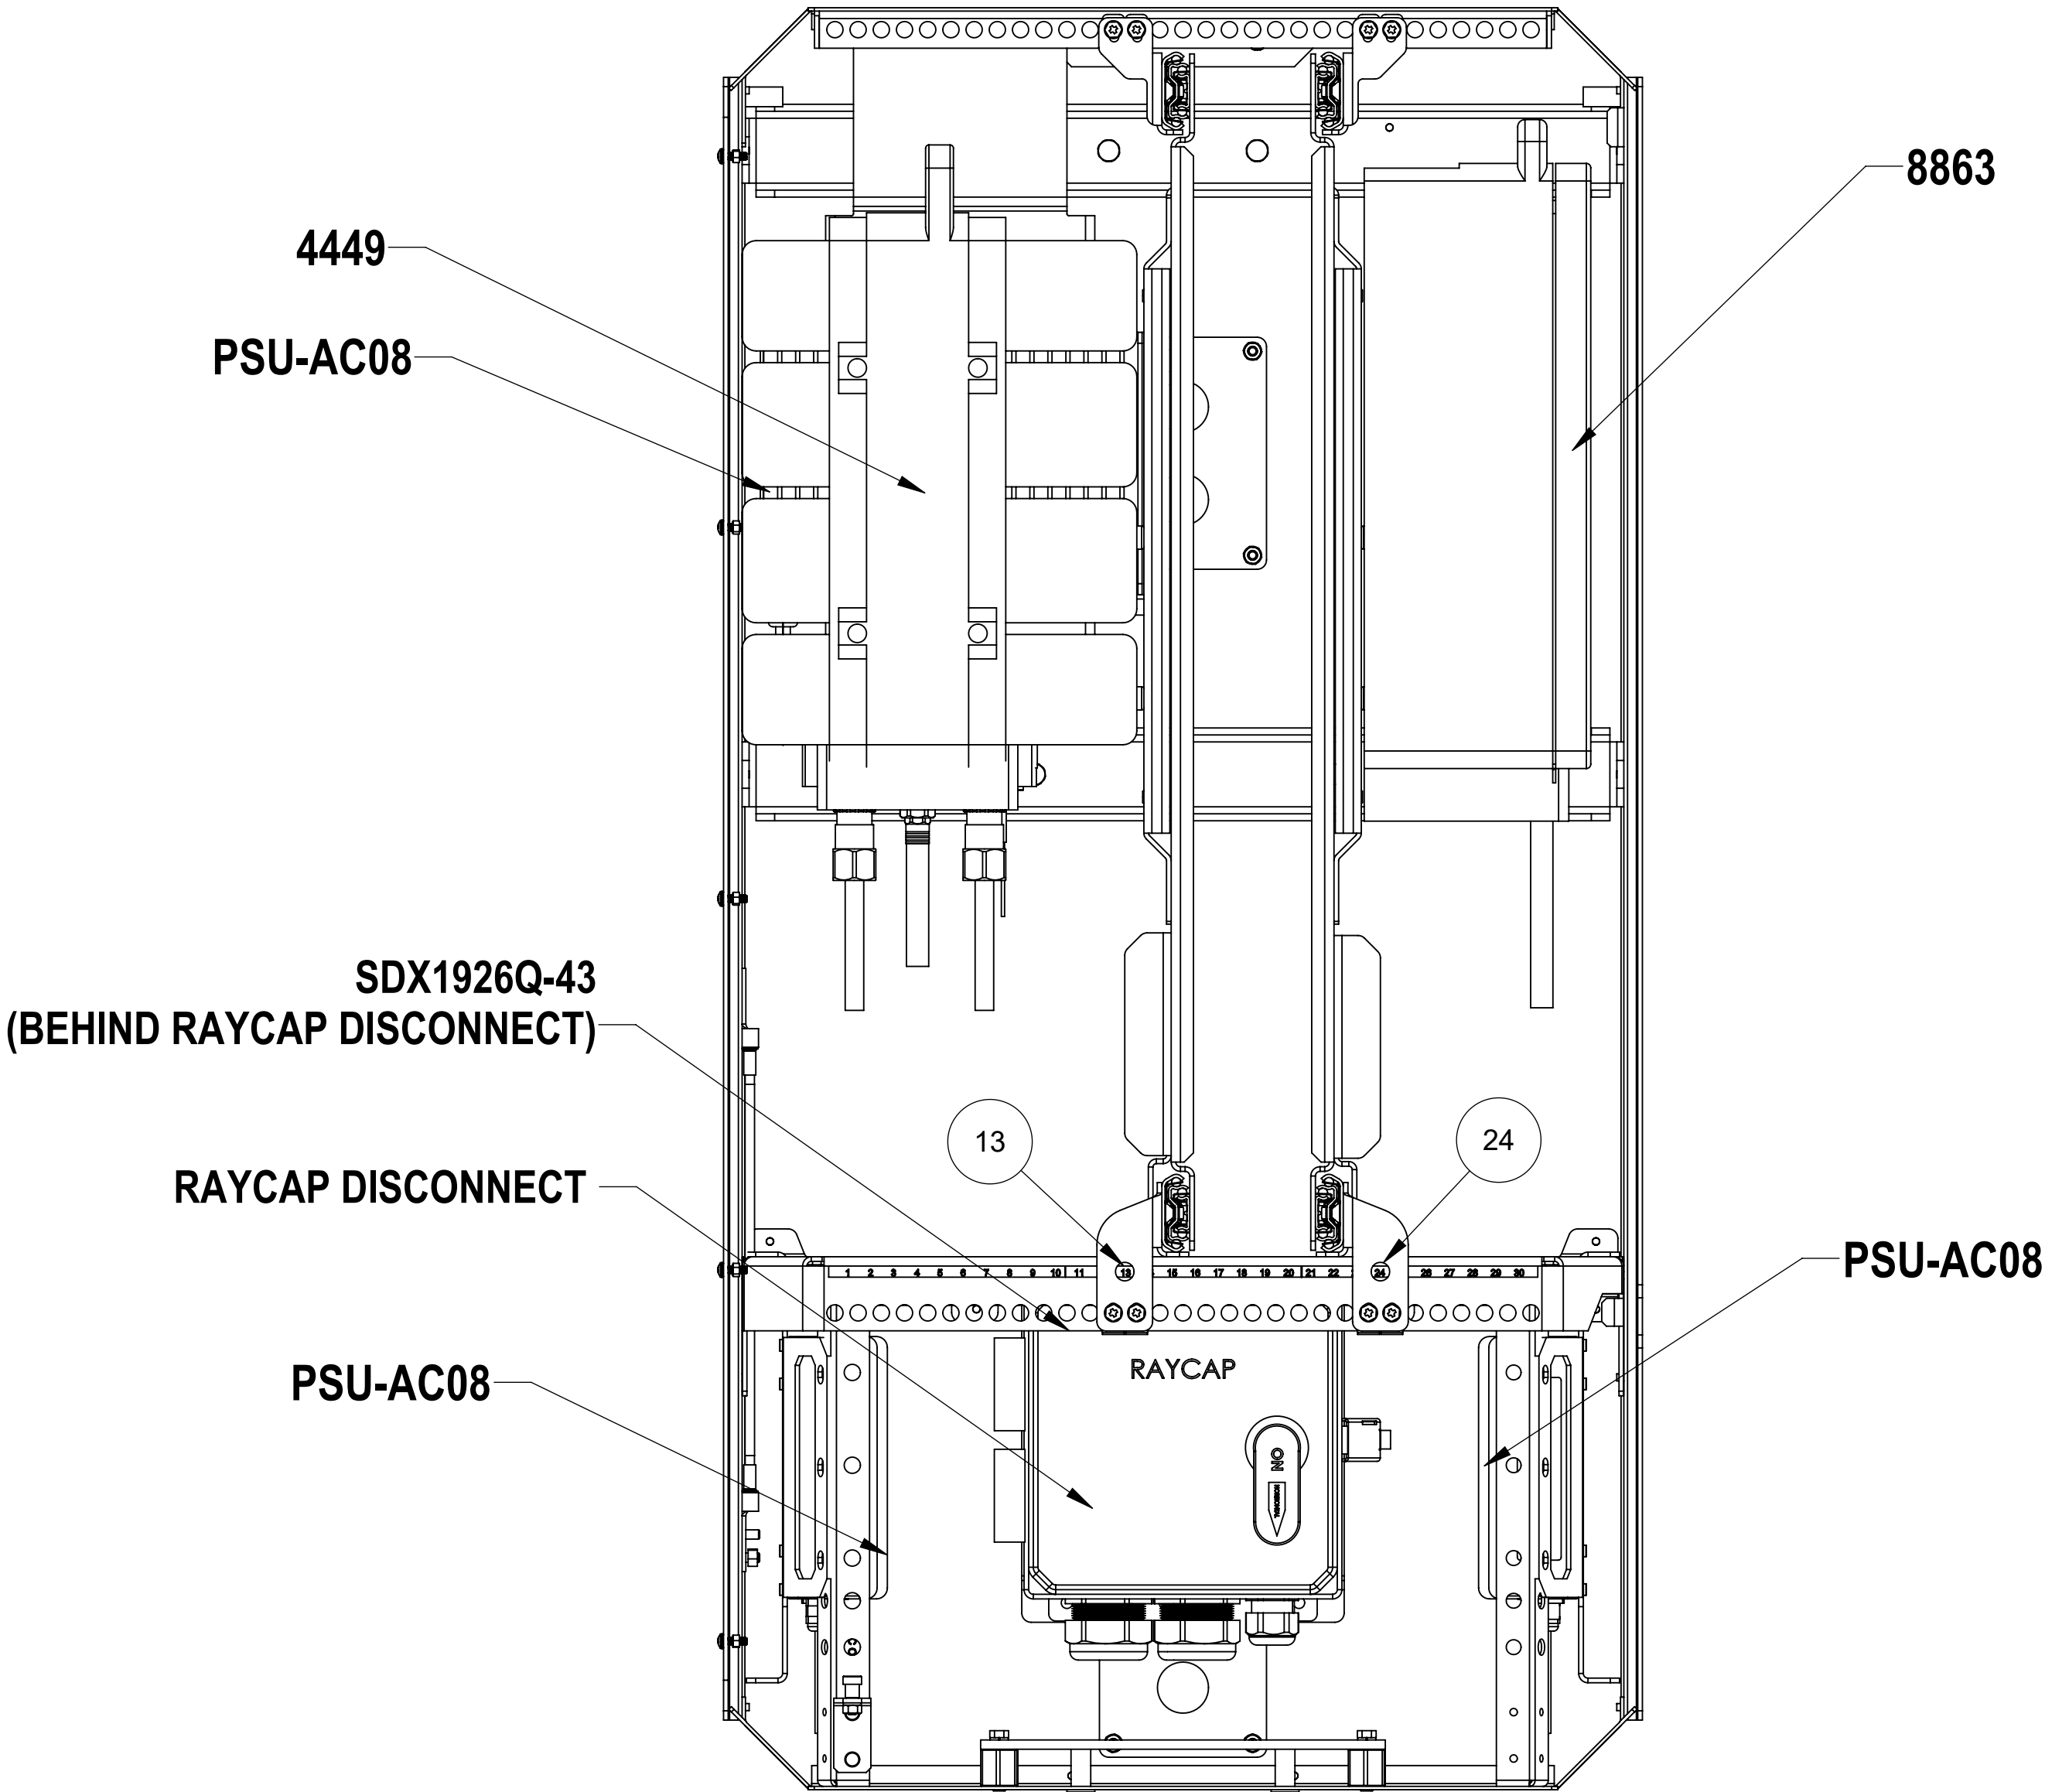



ANDREW® an Amphenol company

TITLE

ASSY,INSTALL INSTRUCTIONS,ERC,MV2

SIZE

C

SCALE

1:12

DOCUMENT NO.

760249586ERC_MV2

DRAWING

VERSION	STATUS	REVISION
03	RE	C

SHEET

13 OF 22

Confidential

4


3

2

1

ERICSSON - CONFIGURATION [E9]

EQUIPMENT	QUANTITY	SLIDE PANEL MOUNTING LOCATION	BACK WALL EQUIPMENT	LOWER EQUIPMENT MOUNTING
ERC 8843	1	15 - SLIDE MTM1117-4300 (LEFT FACING)		
ERC 8863	1	24 - SLIDE MTM1117-4400 (RIGHT FACING)		
PSU-ERC-AC08	2			SEE SHEET 4
PSU-ERC-AC08	1			SEE SHEET 3
SDX1926Q-43	1			SEE SHEET 4
RAYCAP DISCONNECT	1			SEE SHEET 4

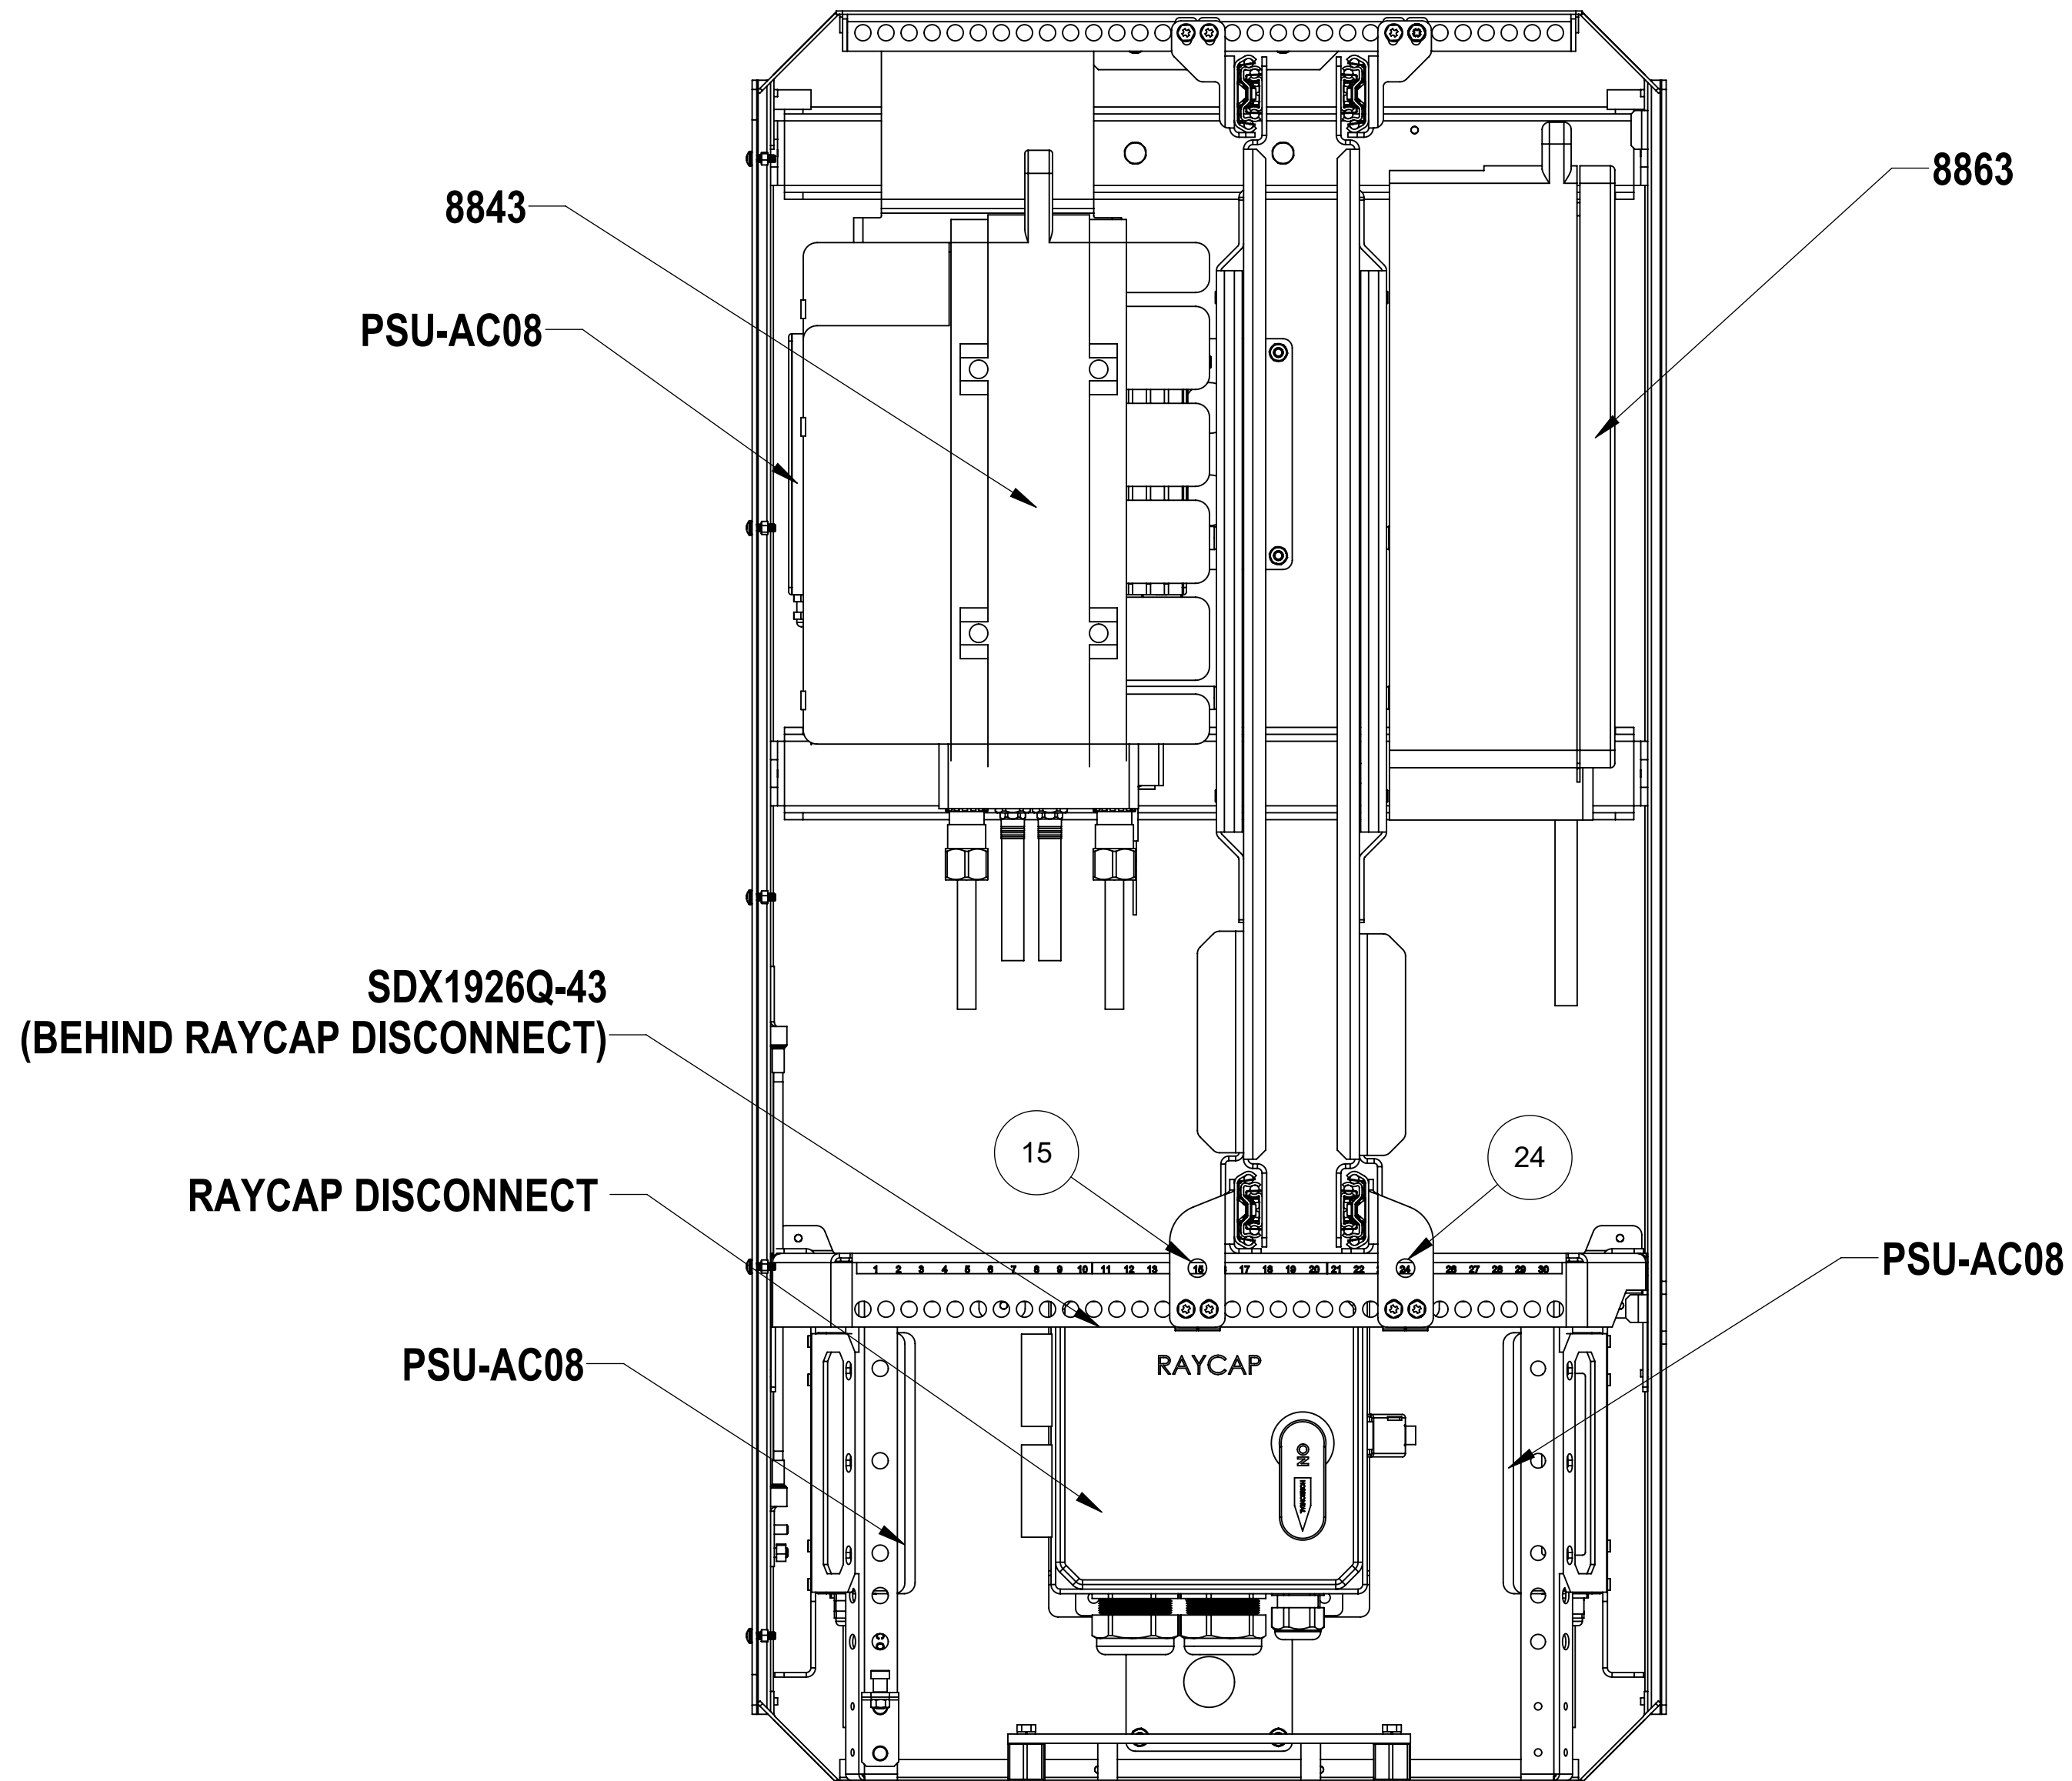


TITLE
ASSY,INSTALL INSTRUCTIONS,ERC,MV2

SIZE C	SCALE 1:12	DOCUMENT NO. 760249586ERC_MV2
------------------	----------------------	---

DRAWING		
VERSION	STATUS	REVISION
03	RE	C

SHEET
4 OF 22

Confidential

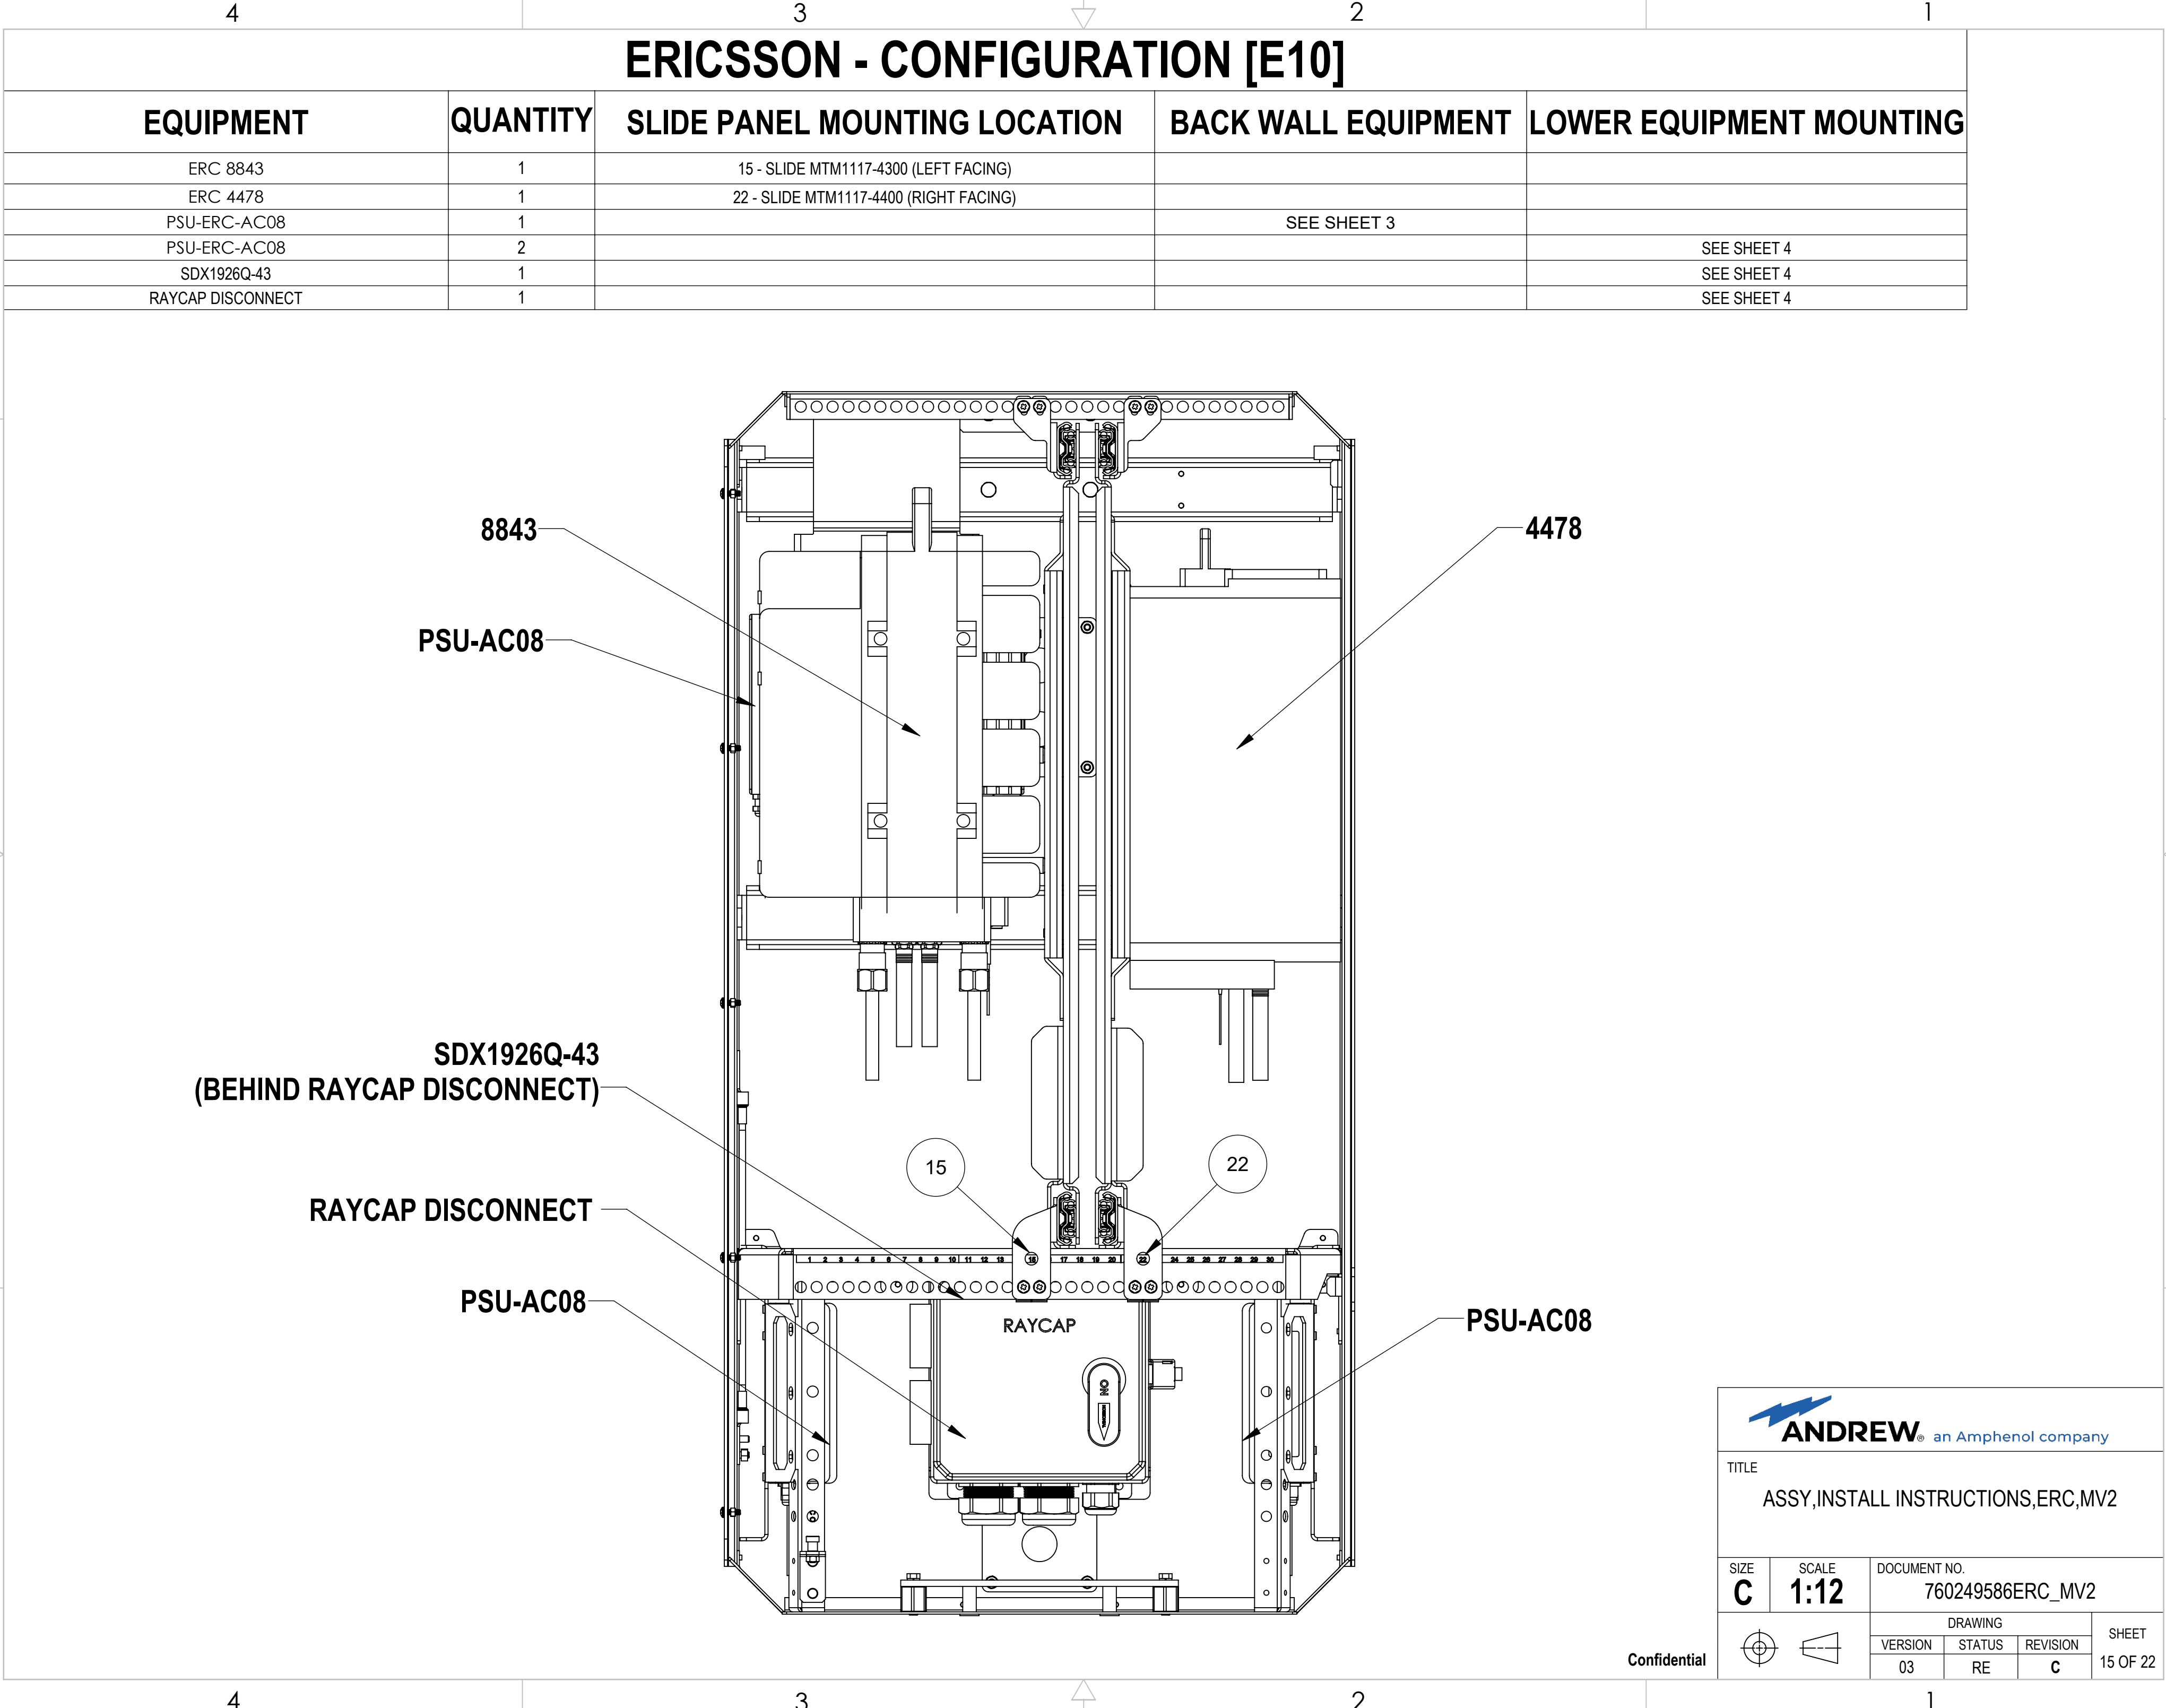

4


3

2

1

ERICSSON - CONFIGURATION [E11]

EQUIPMENT	QUANTITY	SLIDE PANEL MOUNTING LOCATION	BACK WALL EQUIPMENT	LOWER EQUIPMENT MOUNTING
ERC 4449	1	13 - SLIDE MTM1117-4300 (LEFT FACING)		
ERC 4415	1	24 - SLIDE MTM1117-4400 (RIGHT FACING)		
ERC 220X	1		SEE SHEET 3	
PSU-ERC-AC08	2	13 - SLIDE MTM1117-4300 (LEFT FACING)		
PSU-ERC-AC08	2			SEE SHEET 4
SDX1926Q-43	1			SEE SHEET 4
RAYCAP DISCONNECT	1			SEE SHEET 4

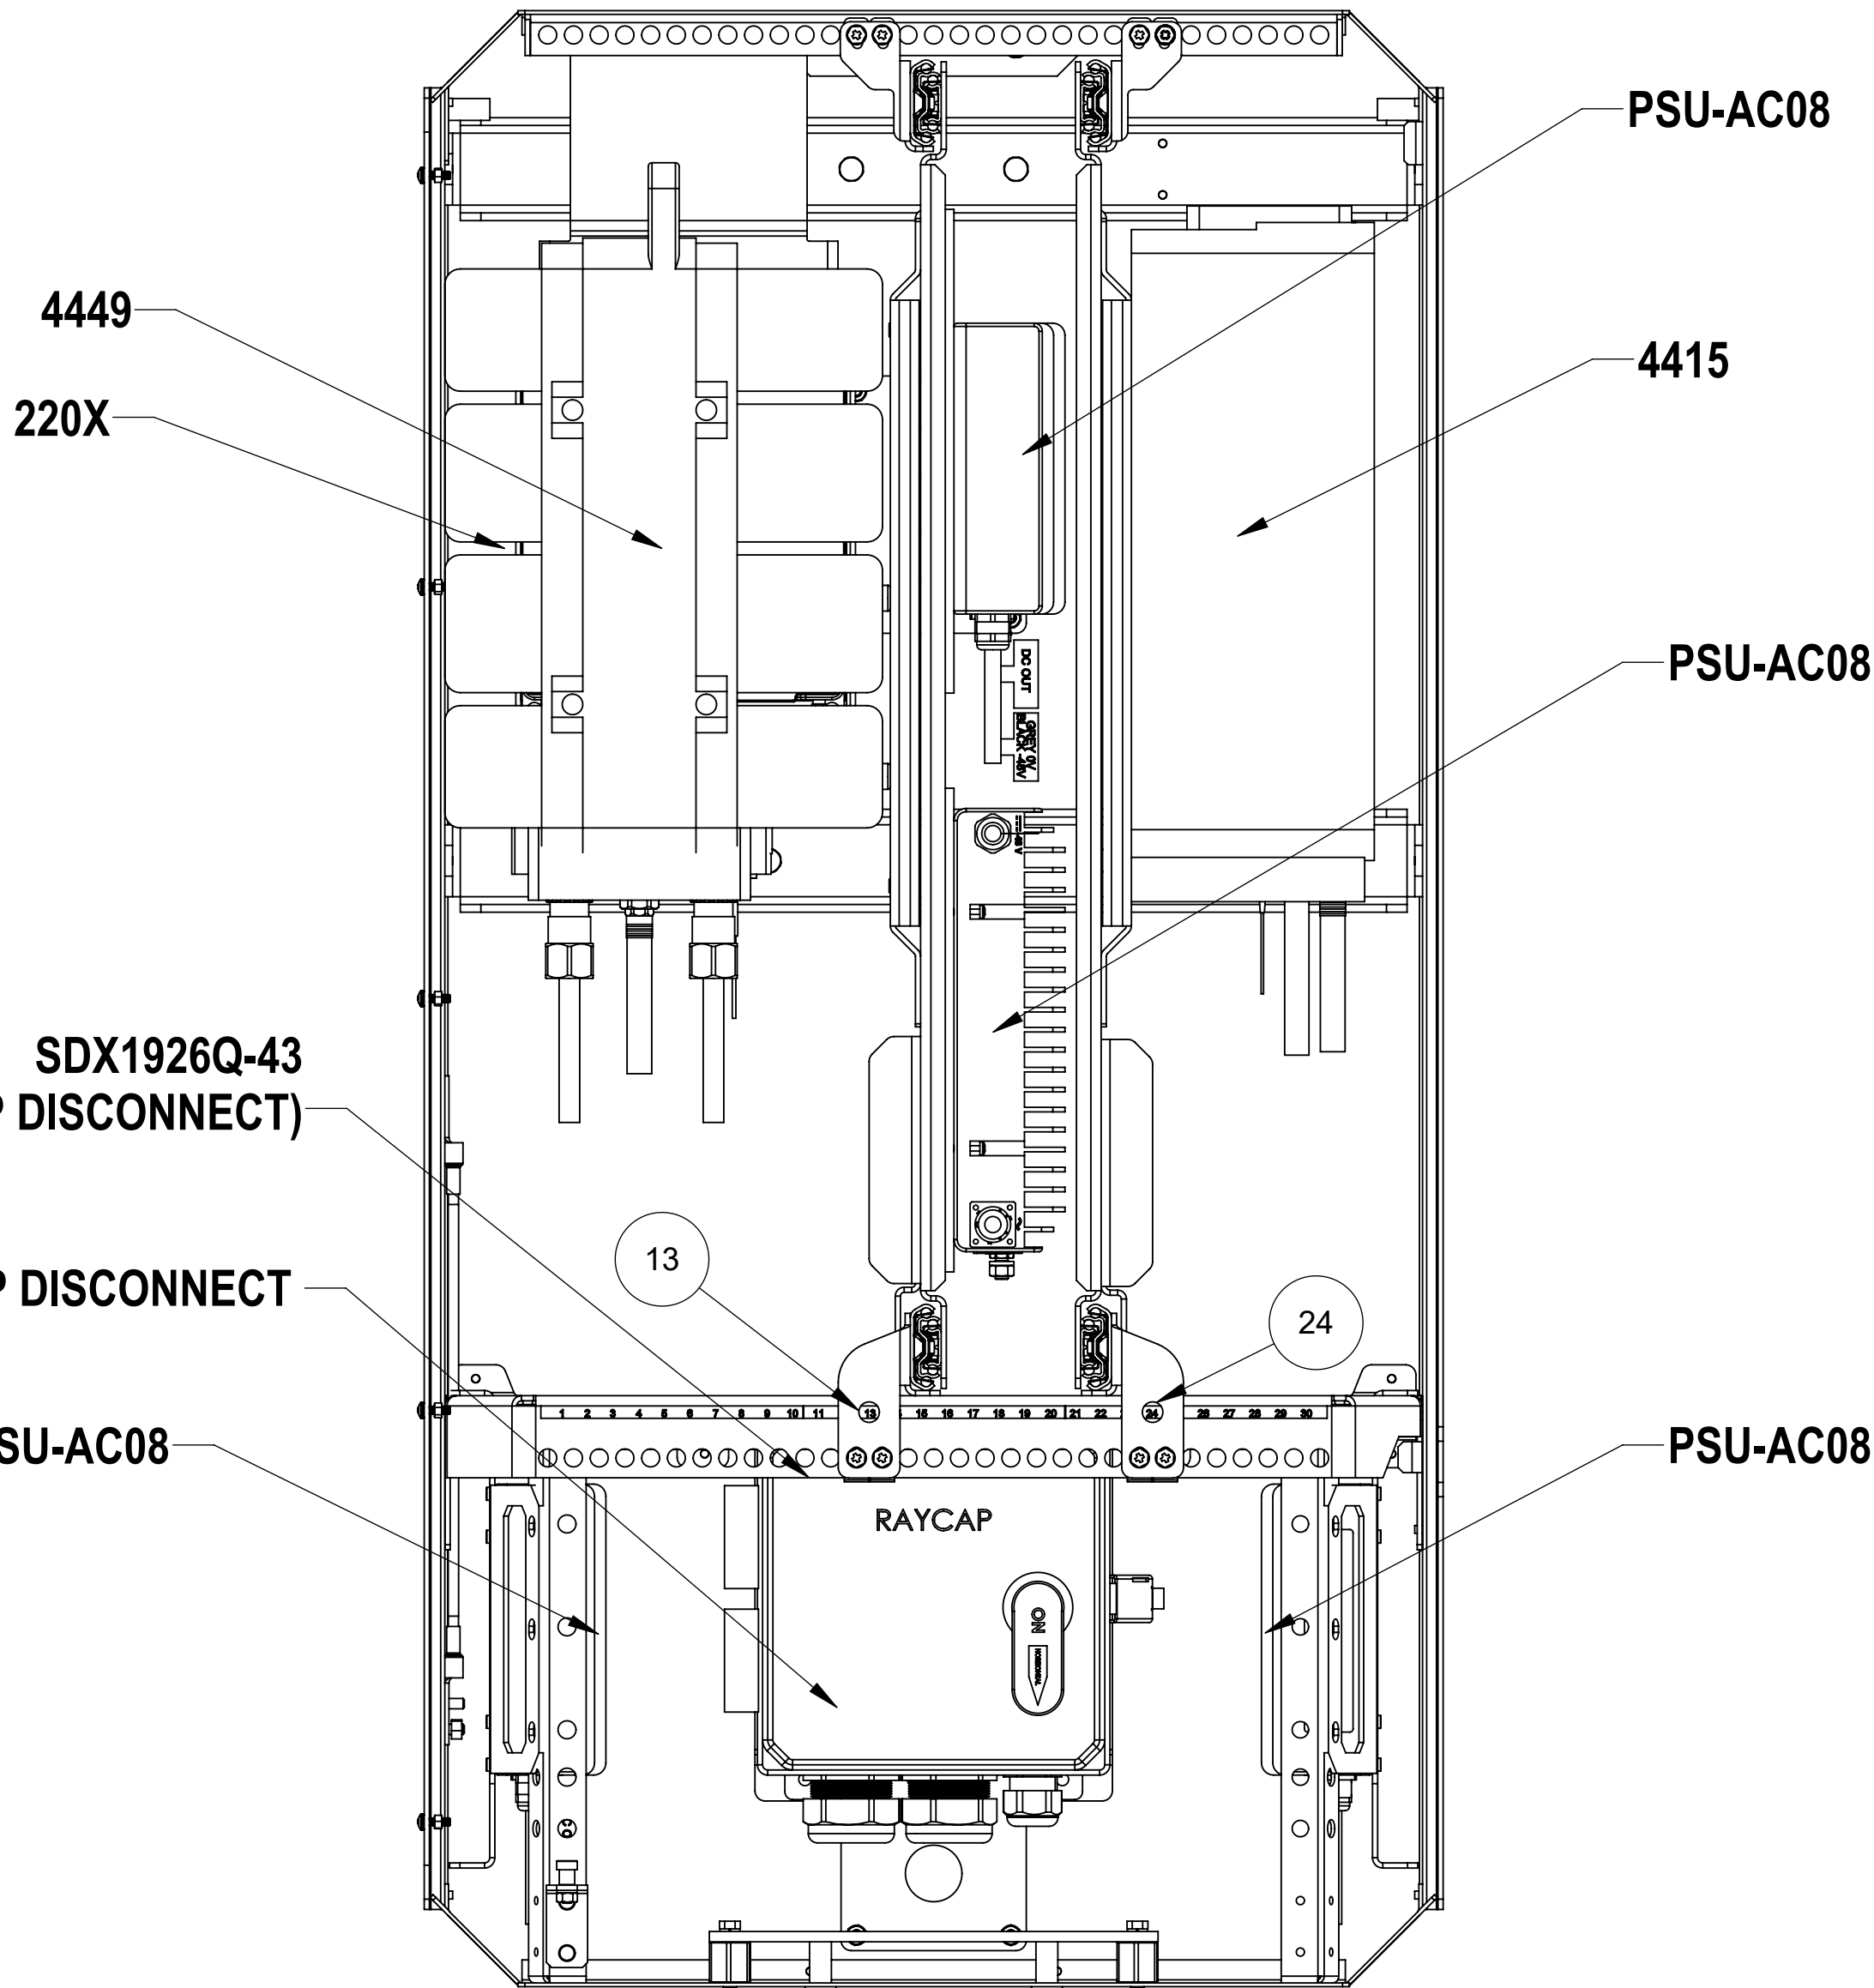



an Amphenol company

TITLE

ASSY,INSTALL INSTRUCTIONS,ERC,MV2

SIZE

C

SCALE

1:12

DOCUMENT NO.

760249586ERC_MV2

DRAWING

VERSION	STATUS	REVISION
03	RE	C

SHEET

16 OF 22

Confidential

4


3

2


1

ERICSSON - CONFIGURATION [E12]

EQUIPMENT	QUANTITY	SLIDE PANEL MOUNTING LOCATION	BACK WALL EQUIPMENT	LOWER EQUIPMENT MOUNTING
ERC 4449	1	13 - SLIDE MTM1117-4300 (LEFT FACING)		
ERC 4455	1	23 - SLIDE MTM1117-4400 (RIGHT FACING)		
PSU-ERC-AC08	1		SEE SHEET 3	
PSU-ERC-AC08	2			SEE SHEET 4
SDX1926Q-43	1			SEE SHEET 4
RAYCAP DISCONNECT	1			SEE SHEET 4

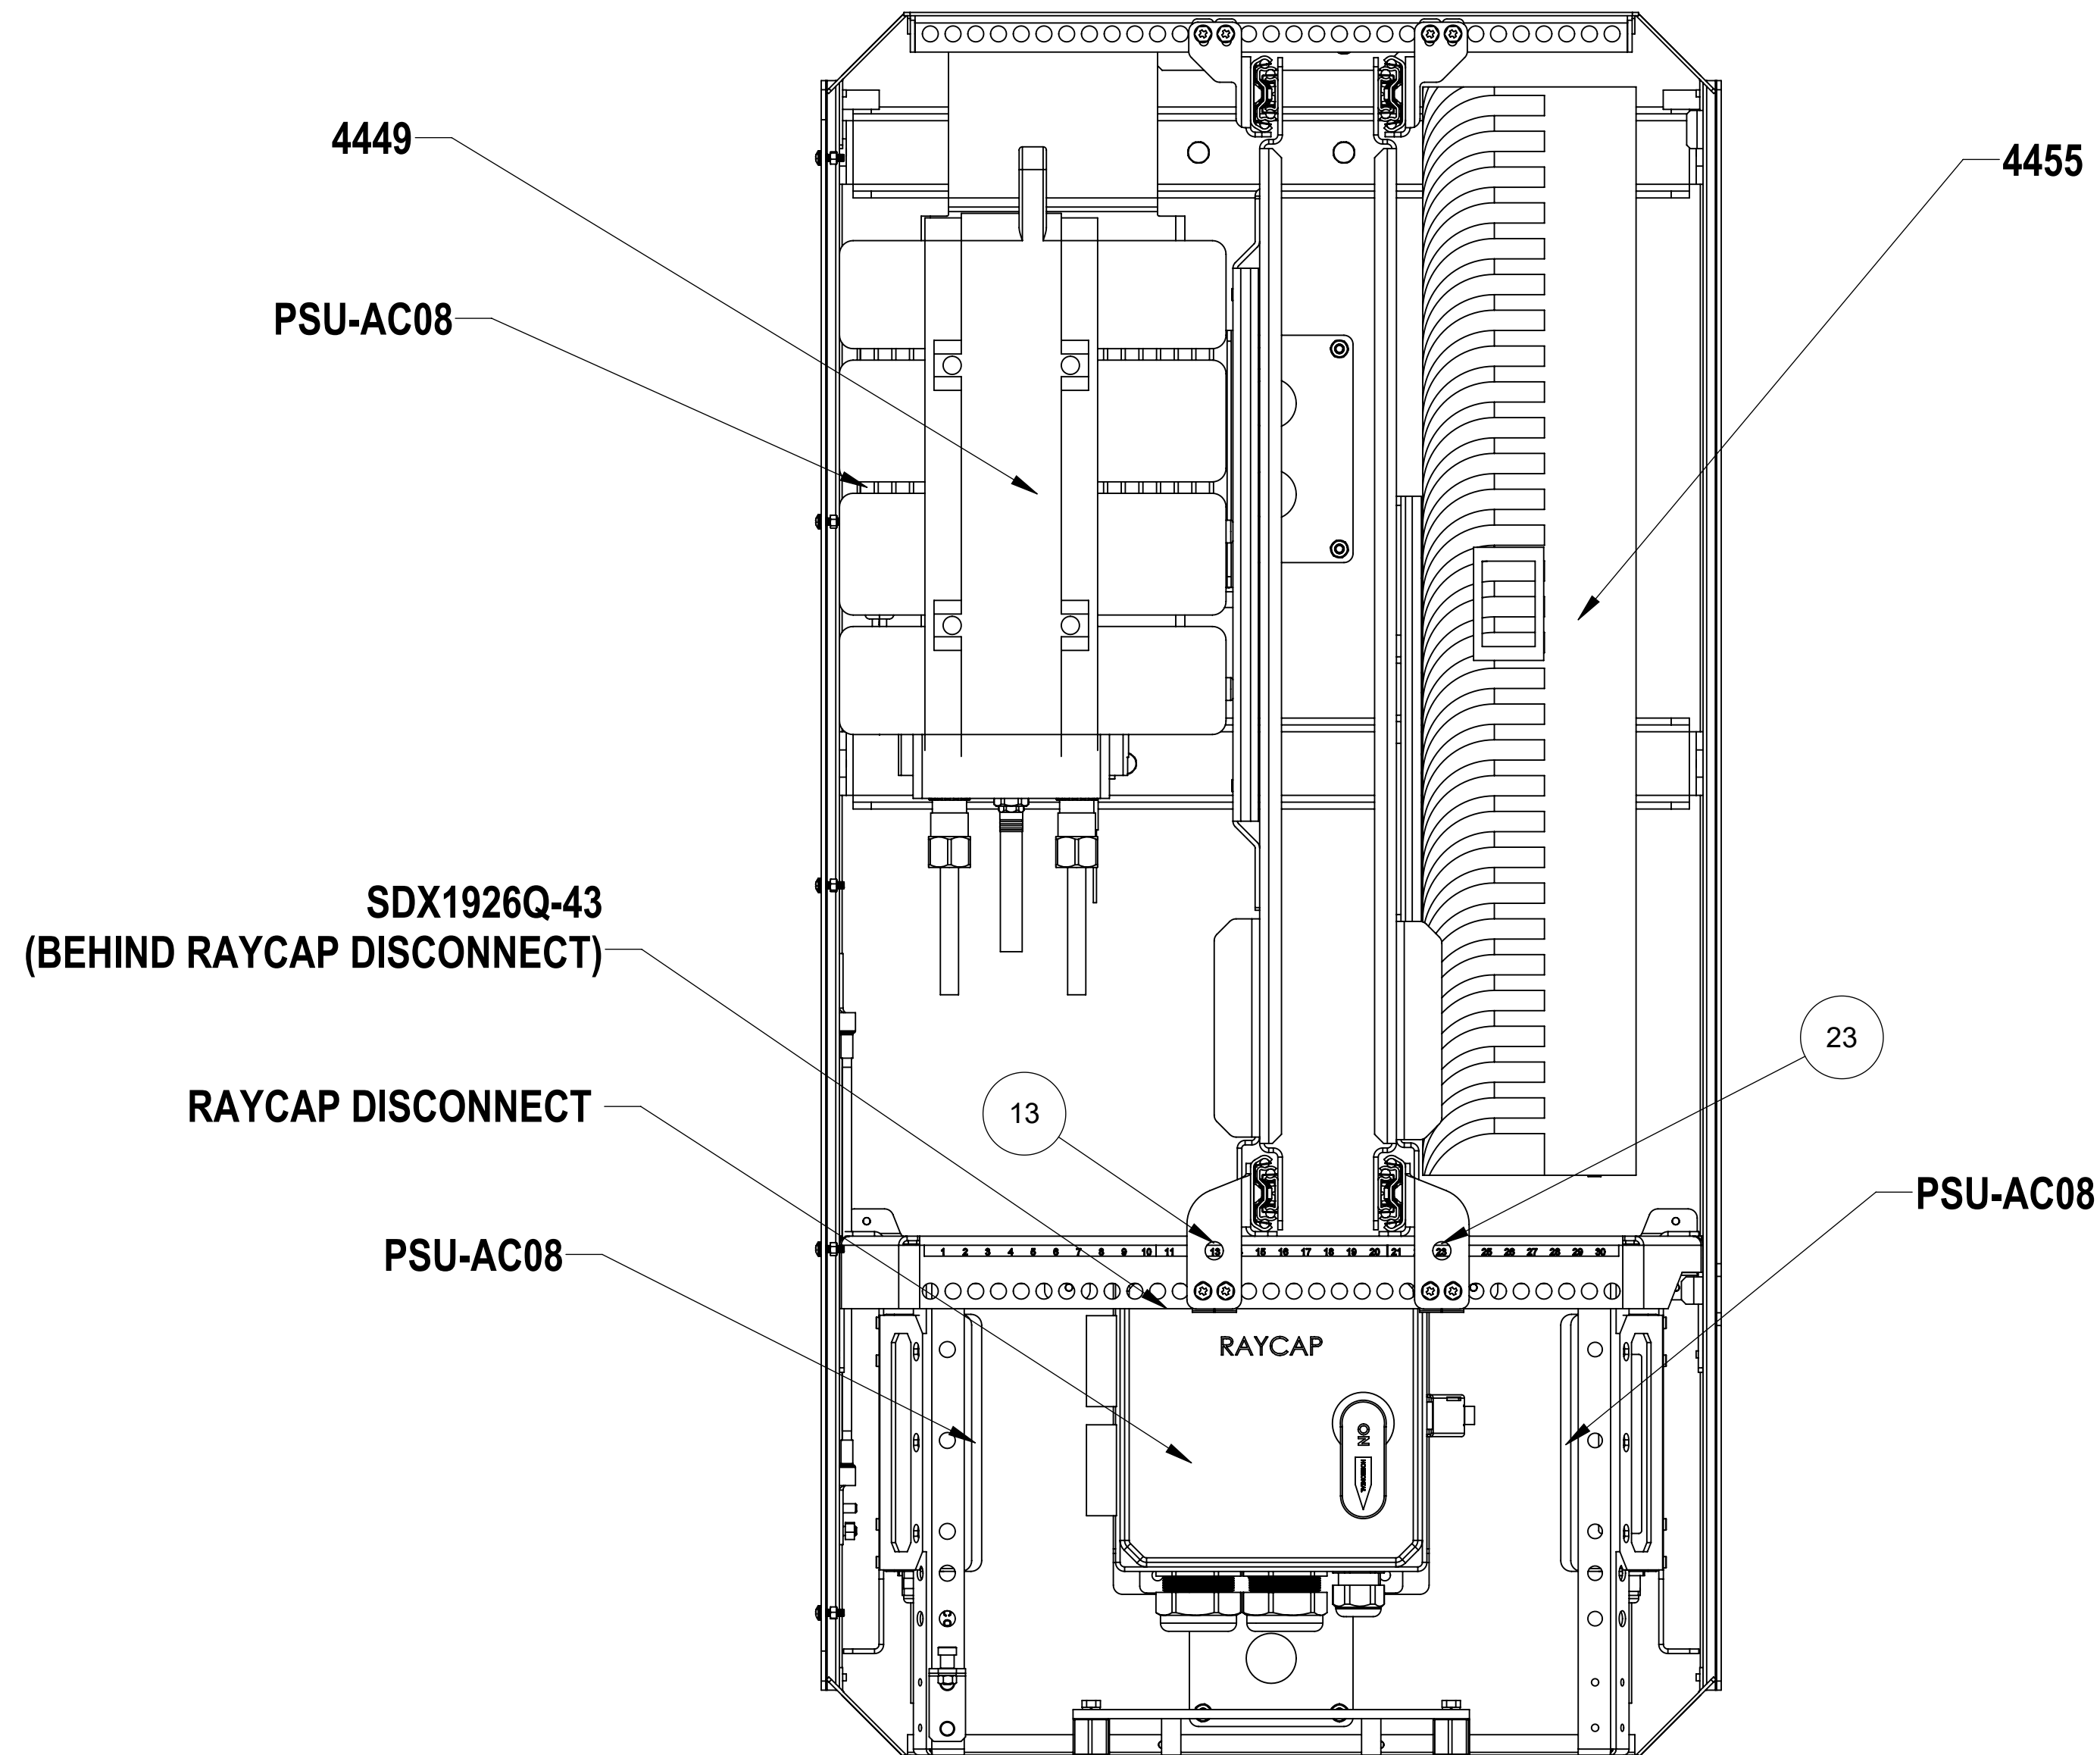

Confidential



DRAWING			SHEET 17 OF 22
VERSION	STATUS	REVISION	
03	RE	C	

TITLE	ASSY,INSTALL INSTRUCTIONS,ERC,MV2
-------	-----------------------------------

SIZE C	SCALE 1:12	DOCUMENT NO. 760249586ERC_MV2
------------------	----------------------	---

DRAWING

VERSION	STATUS	REVISION
03	RE	C

SHEET
7 OF 22


1


SEE SHEET 4

Confidential


ERICSSON - CONFIGURATION [E14]

EQUIPMENT	QUANTITY	SLIDE PANEL MOUNTING LOCATION	BACK WALL EQUIPMENT	LOWER EQUIPMENT MOUNTING
ERC 84478	1	9 - SLIDE MTM1117-4300 (LEFT FACING)		
ERC 84478	1	22 - SLIDE MTM1117-4400 (RIGHT FACING)		
SSC-PSU-ERC-AC08	2			SEE SHEET 4
SDX1926Q-43	1			SEE SHEET 4
RAYCAP DISCONNECT	1			SEE SHEET 4

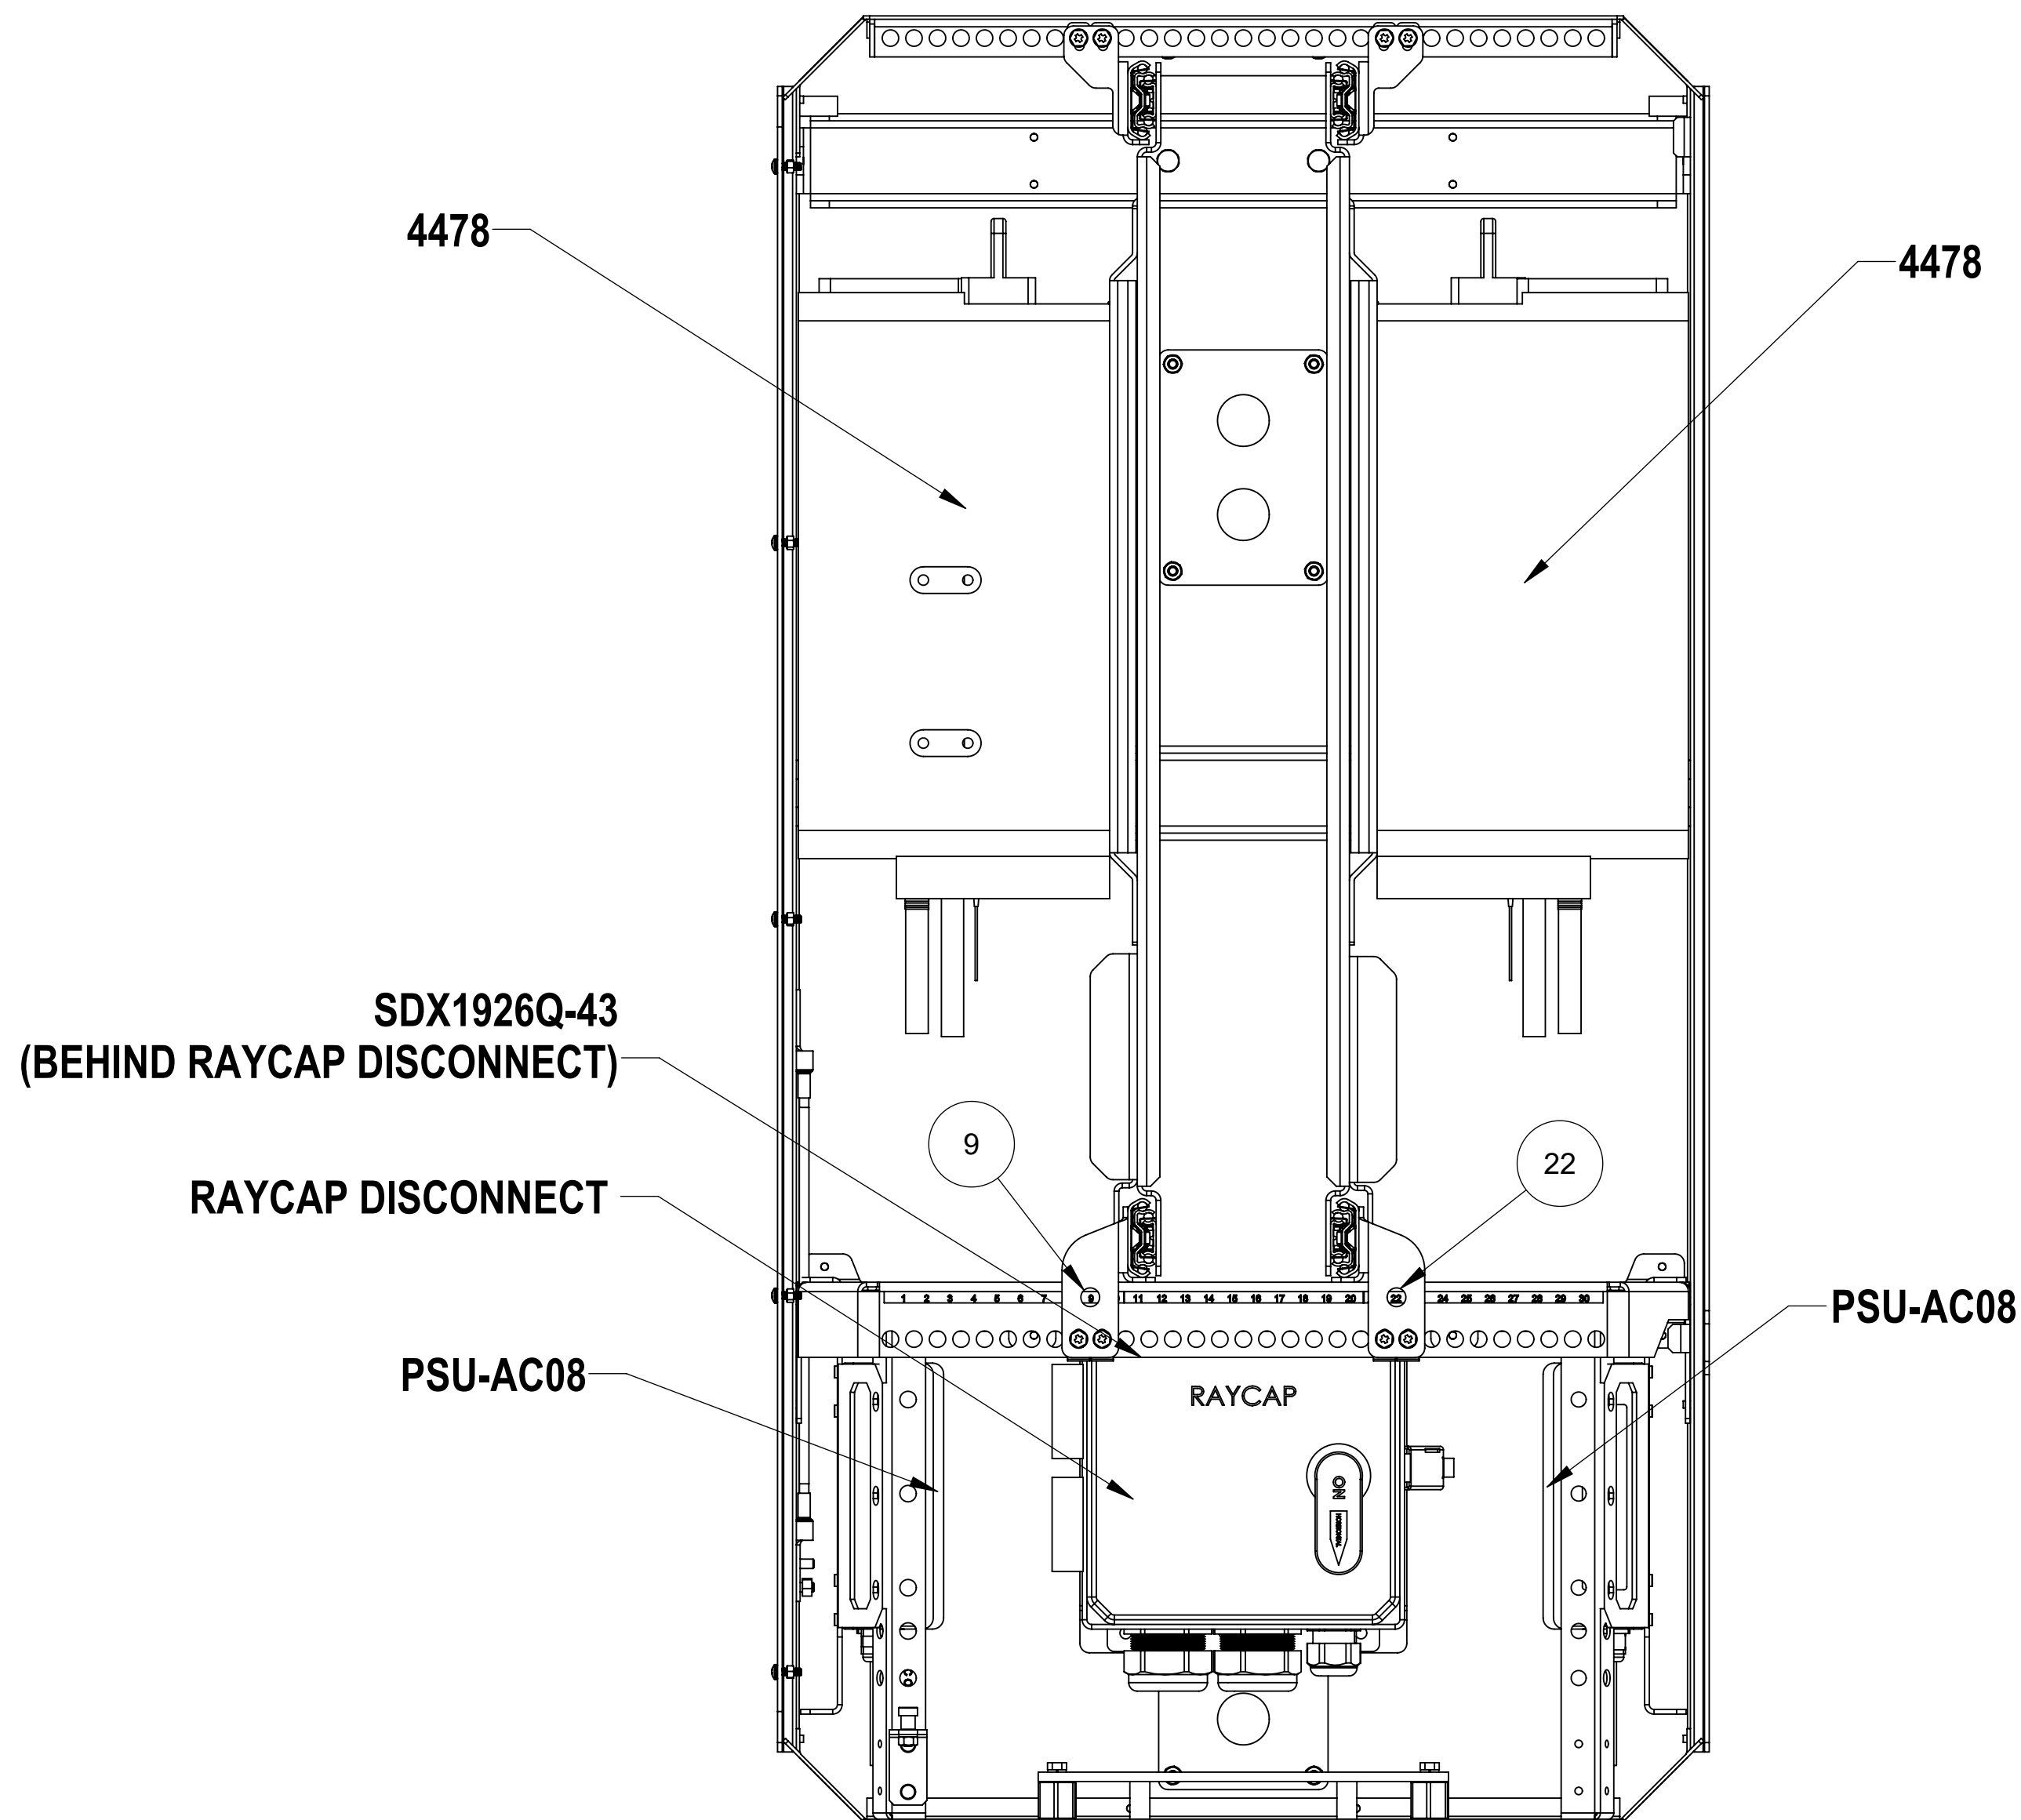


					
TITLE					
ASSY,INSTALL INSTRUCTIONS,ERC,MV2					
SIZE	SCALE	DOCUMENT NO.			
C	1:12	760249586ERC_MV2			
		DRAWING		SHEET 19 OF 22	
		VERSION	STATUS		REVISION
		03	RE		C

Confidential

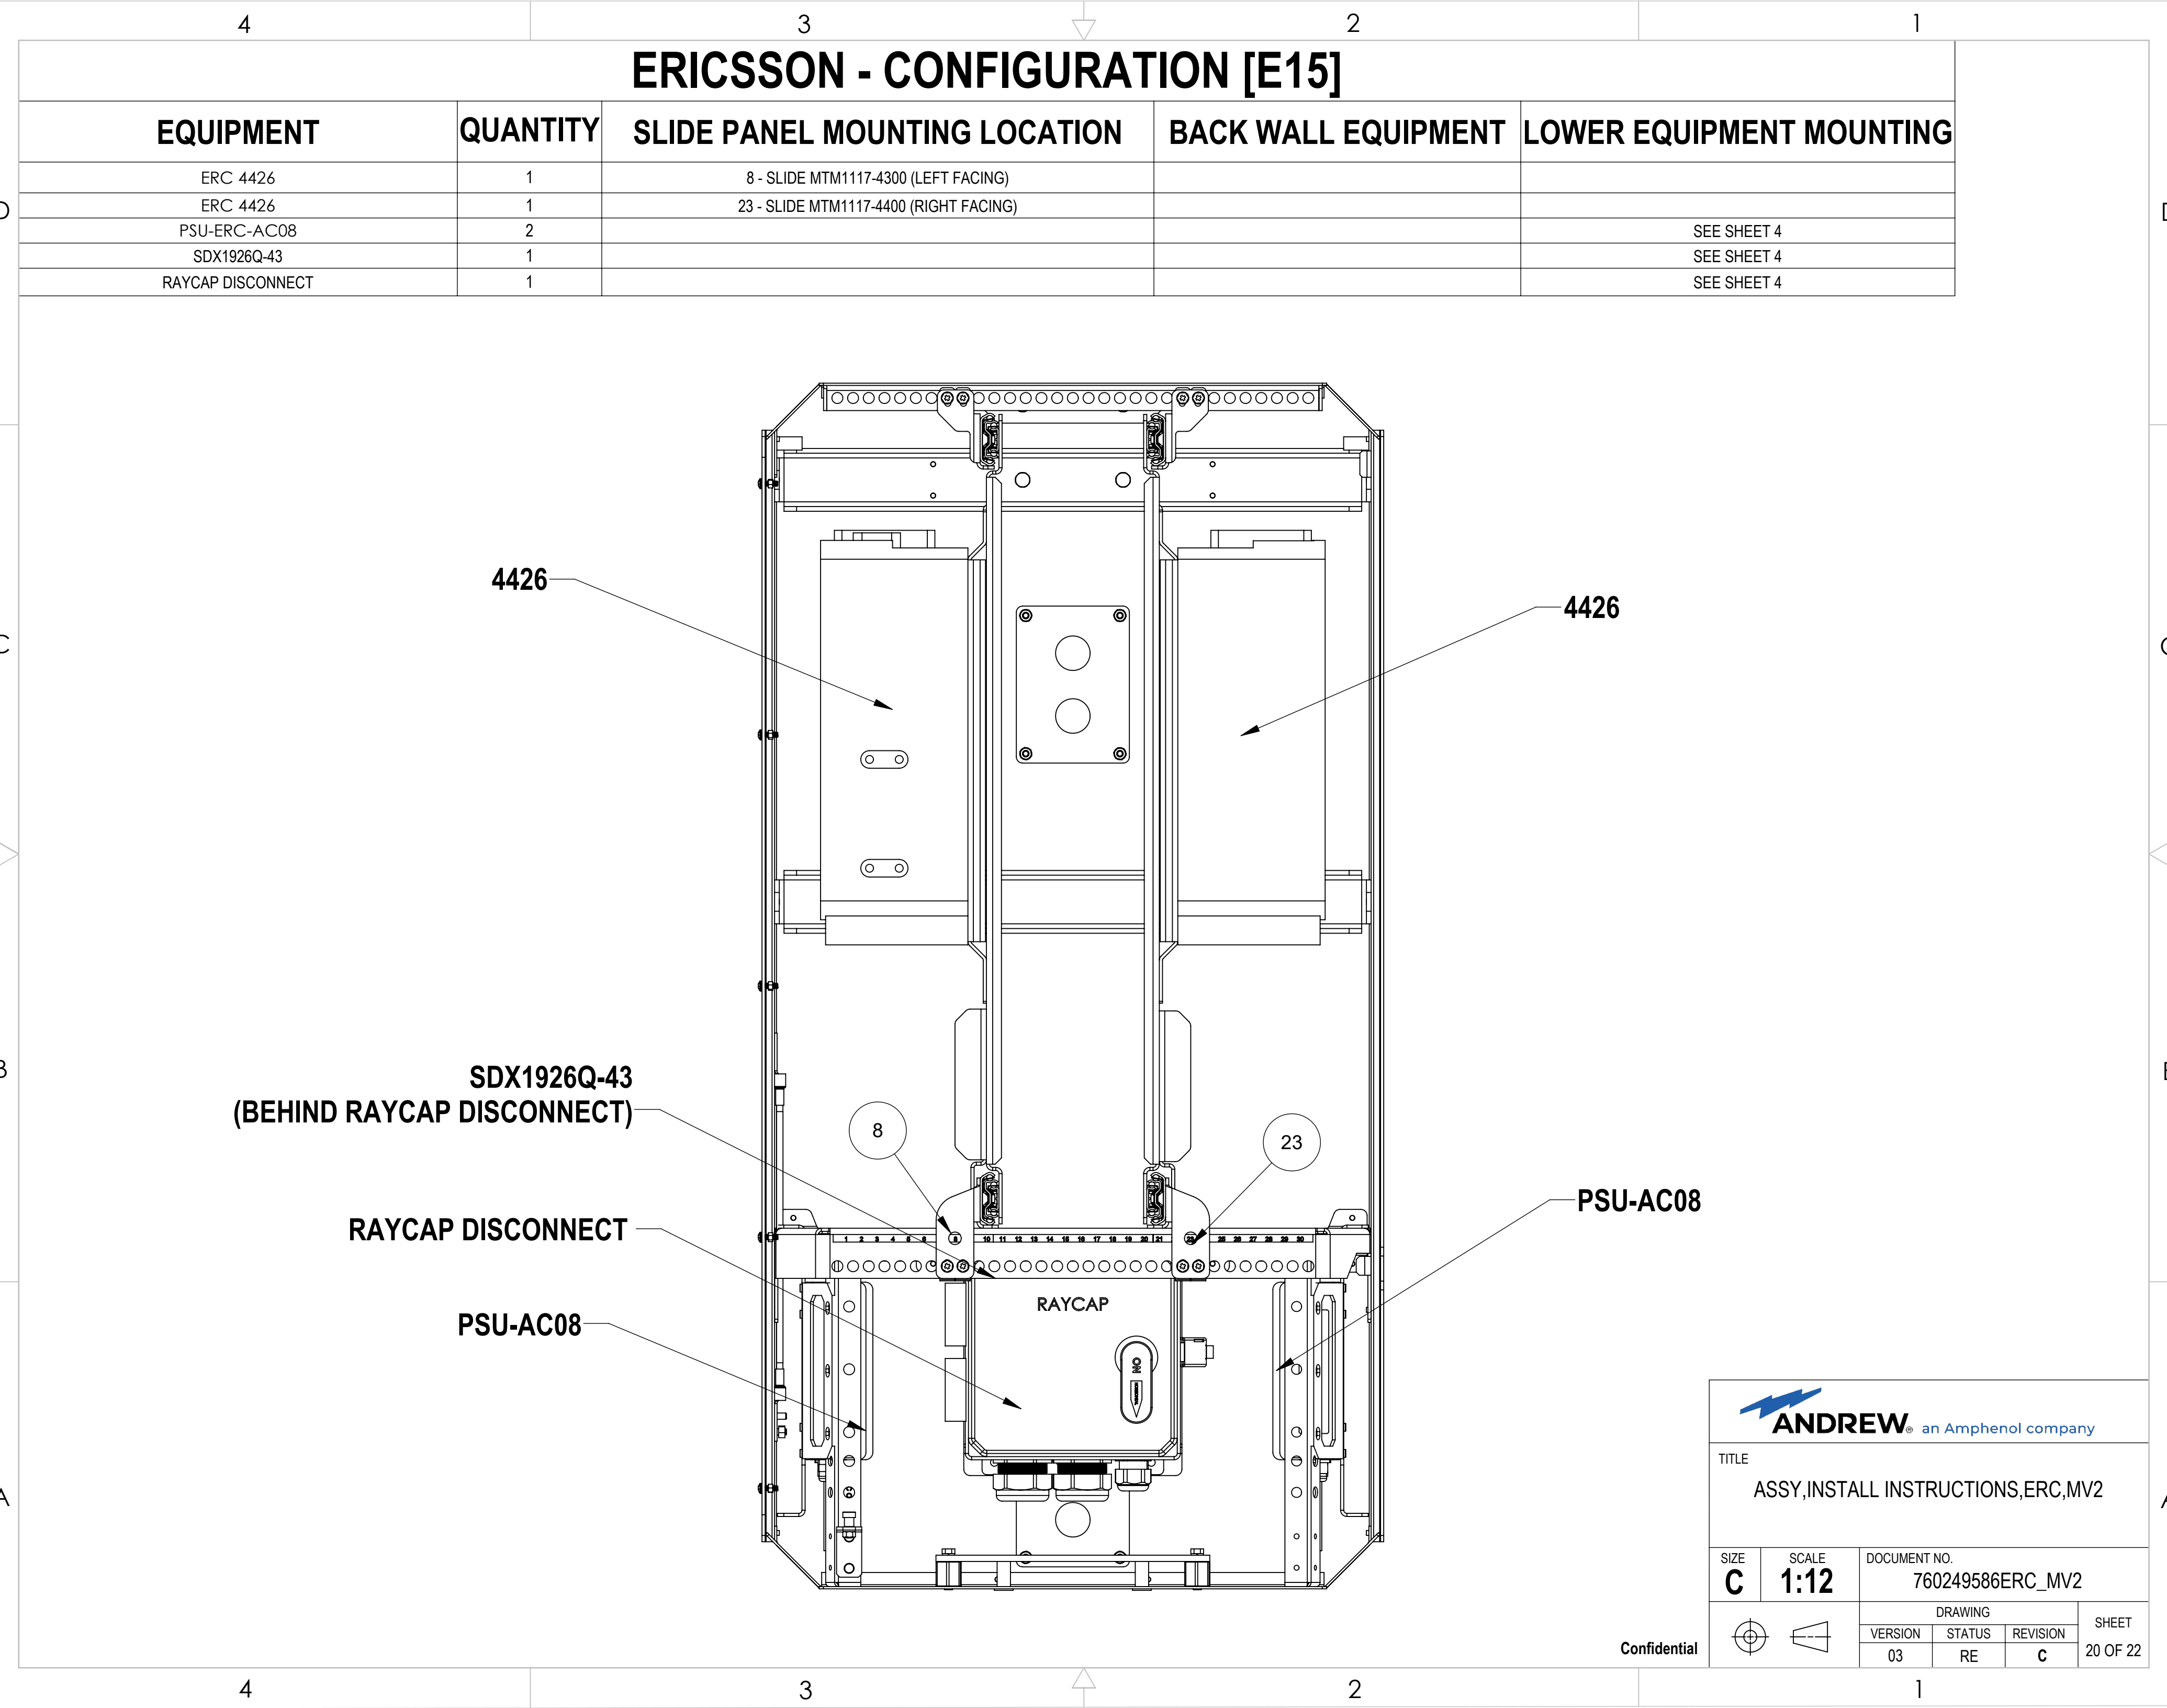

ERICSSON - CONFIGURATION [E15]


EQUIPMENT	QUANTITY	SLIDE PANEL MOUNTING LOCATION	BACK WALL EQUIPMENT	LOWER EQUIPMENT MOUNTING
ERC 4426	1	8 - SLIDE MTM1117-4300 (LEFT FACING)		
ERC 4426	1	23 - SLIDE MTM1117-4400 (RIGHT FACING)		
PSU-ERC-AC08	2			SEE SHEET 4
SDX1926Q-43	1			SEE SHEET 4
RAYCAP DISCONNECT	1			SEE SHEET 4

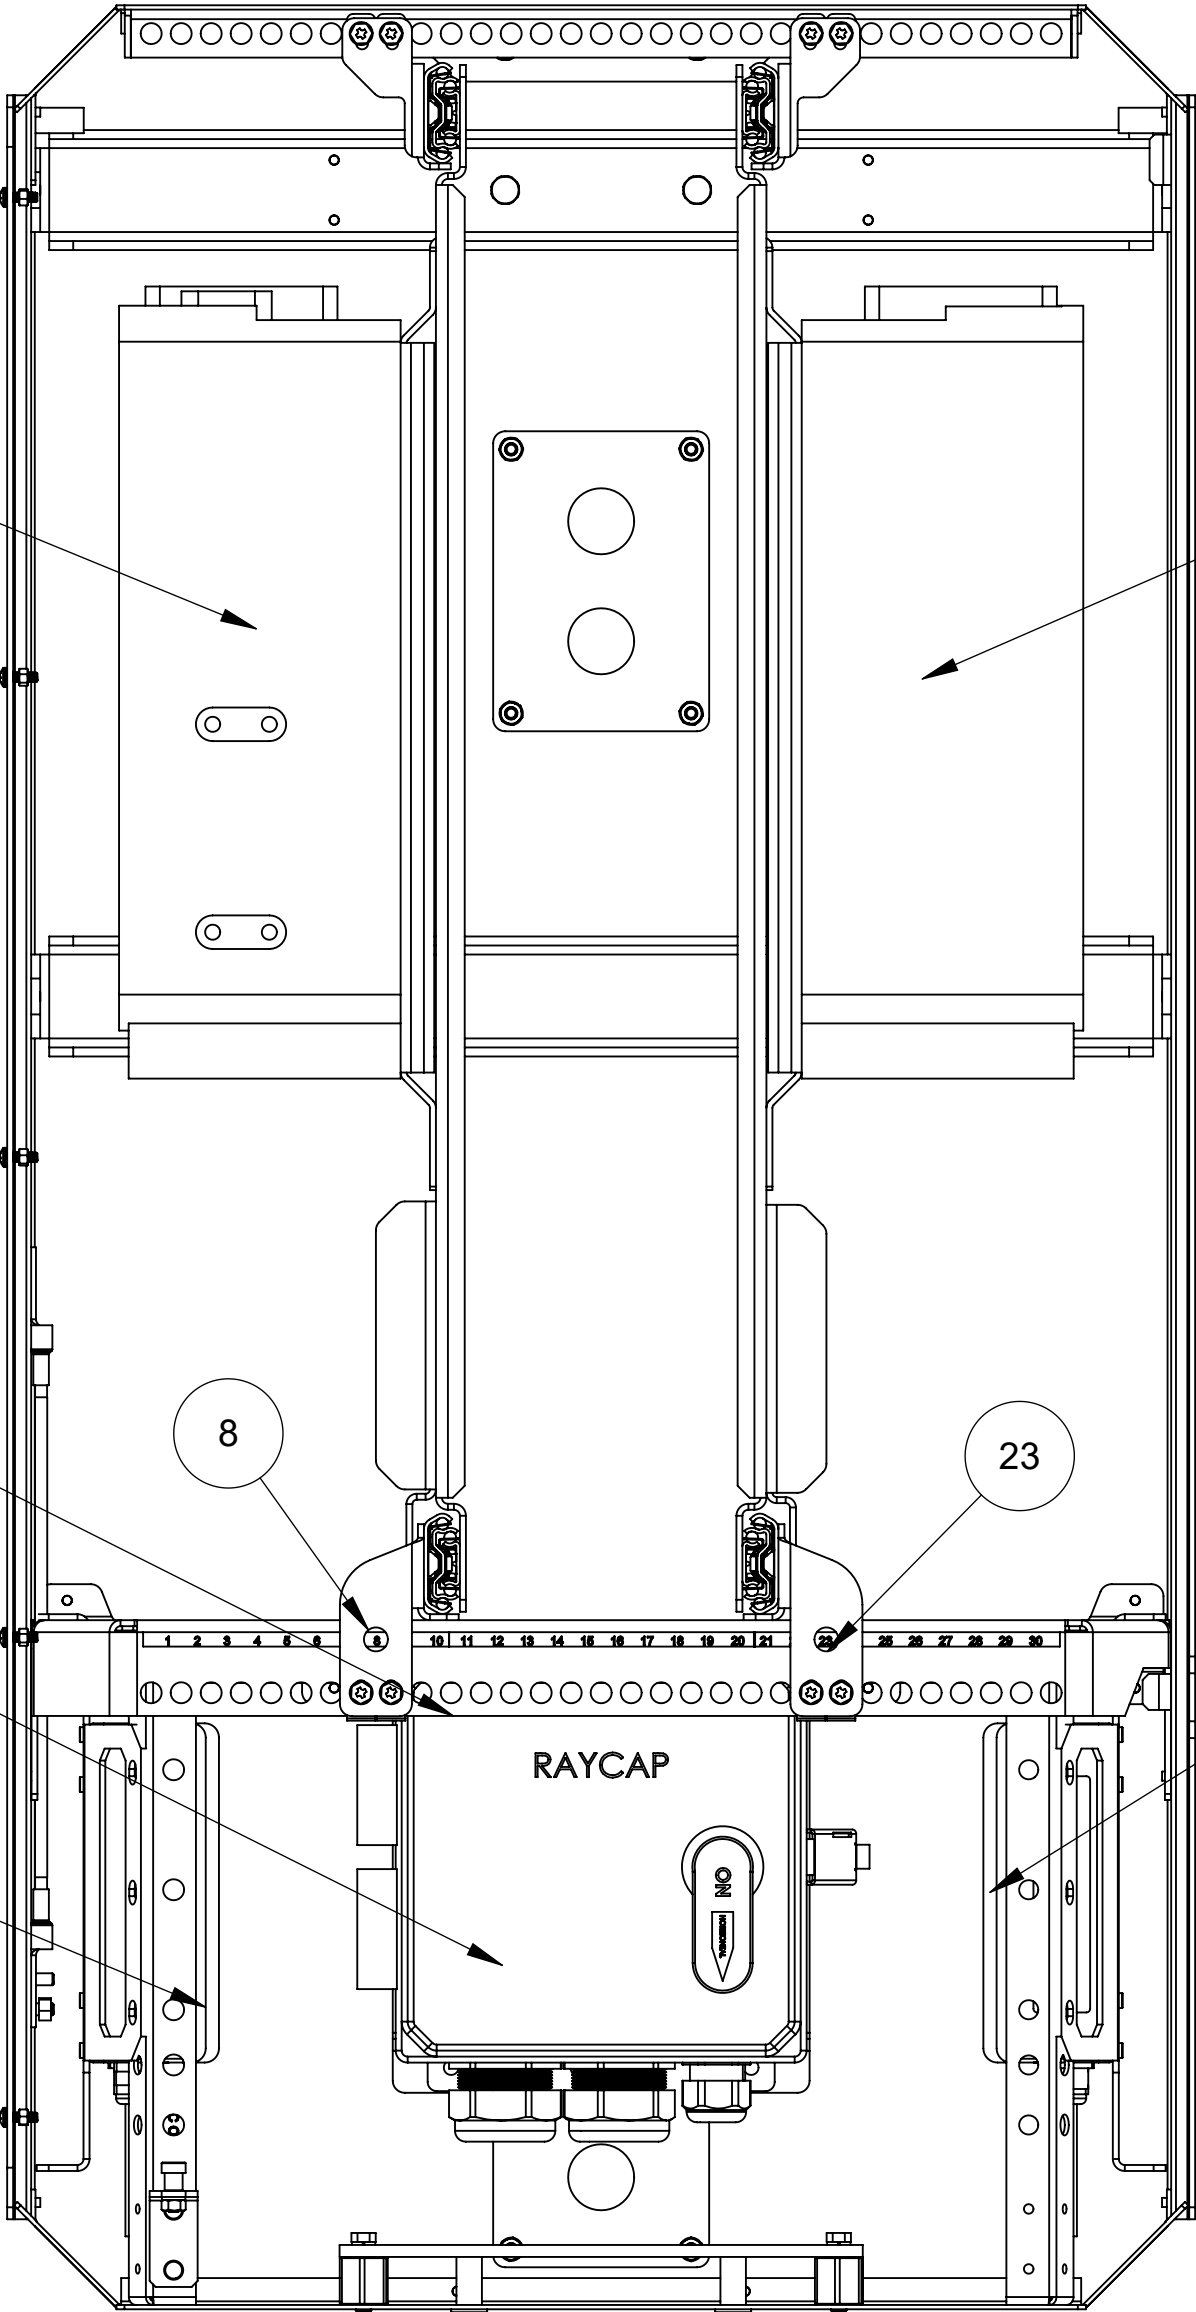

ANDREW® an Amphenol company

TITLE
ASSY,INSTALL INSTRUCTIONS,ERC,MV2

SIZE C	SCALE 1:12	DOCUMENT NO. 760249586ERC_MV2
DRAWING		SHEET 20 OF 22
VERSION 03	STATUS RE	REVISION C

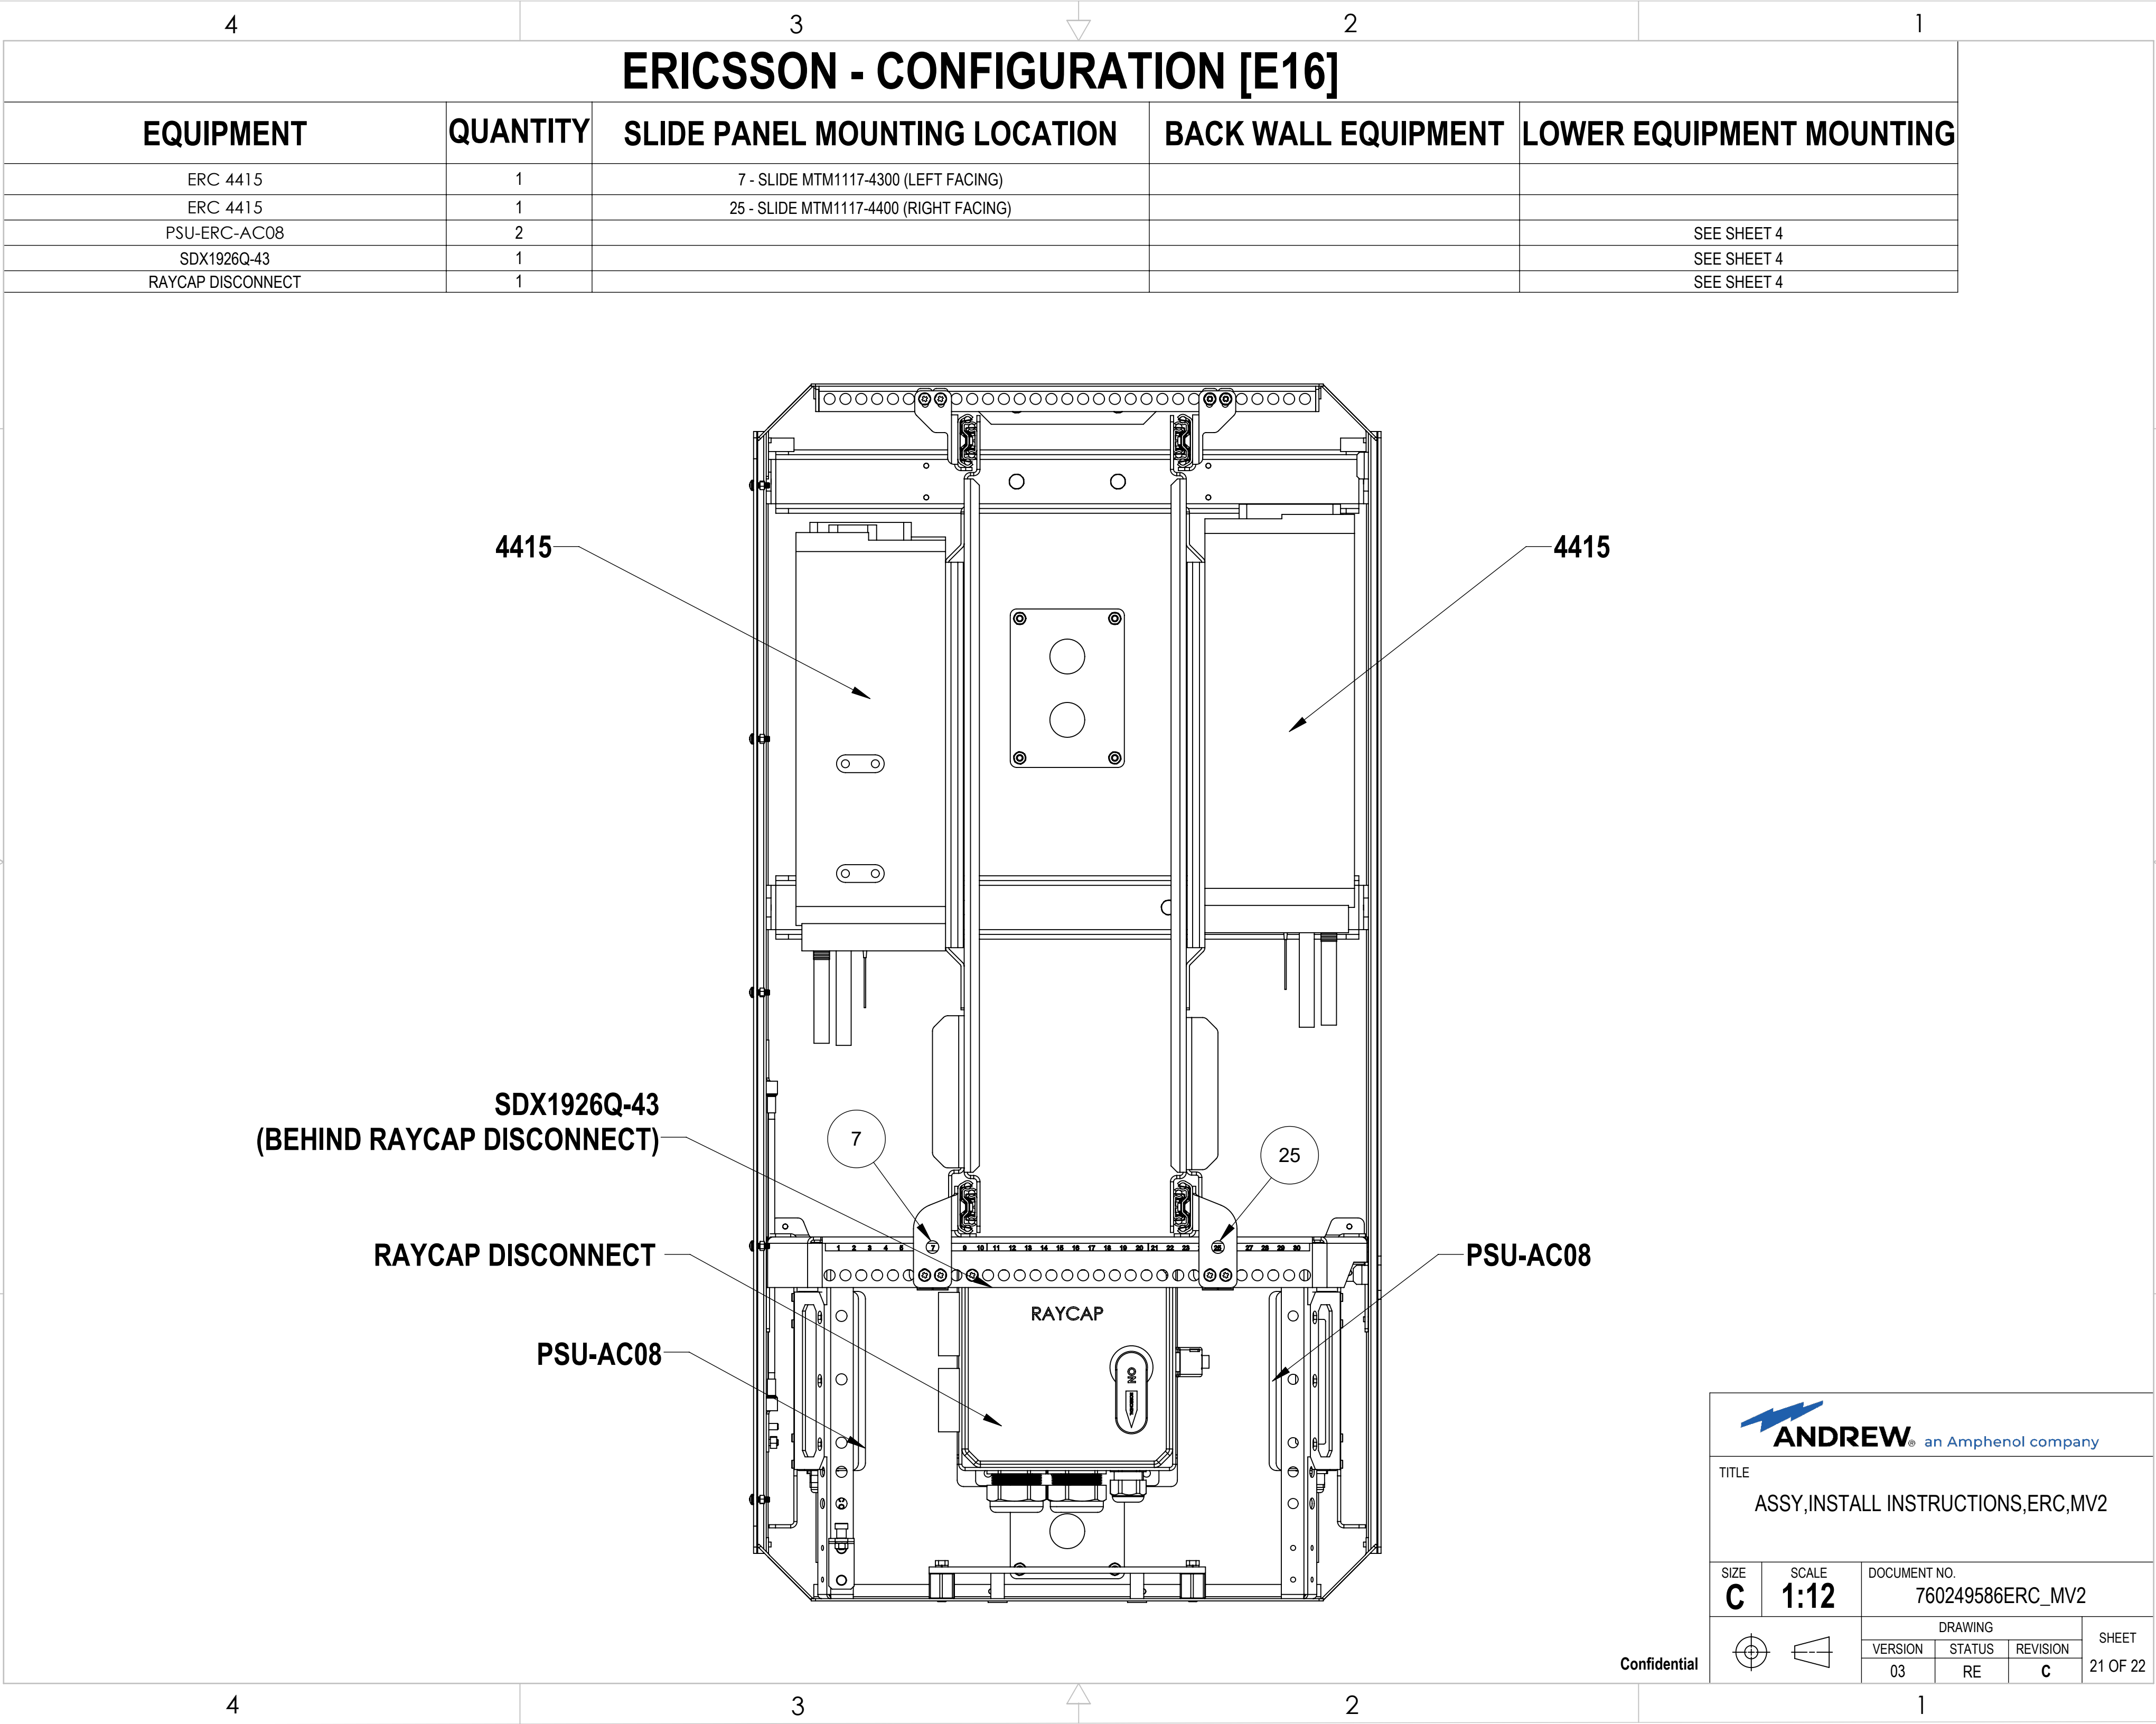

1

D

SHEET
22 OF 22